

# Environmental Performance Assessment

James H. Clarke, Ph.D.

Professor of the Practice Civil & Environmental Engineering  
Professor, Earth & Environmental Sciences

Kevin G. Brown Ph.D.

Senior Research Scientist  
Department of Civil and Environmental Engineering


Vanderbilt University

Consortium for Risk Evaluation with Stakeholder Participation (CRESP)  
Nashville, TN

# Introductory Comments

- What do we mean by environmental performance assessment?
- Importance of and reliance upon performance assessment with respect to decision-making for waste management and environmental restoration.
- Challenge associated with forecasting performance over time periods that exceed our experience by several orders of magnitude.
- Importance of the conceptual model(s)
- Uncertainty?

# NCRP 152 (2006)

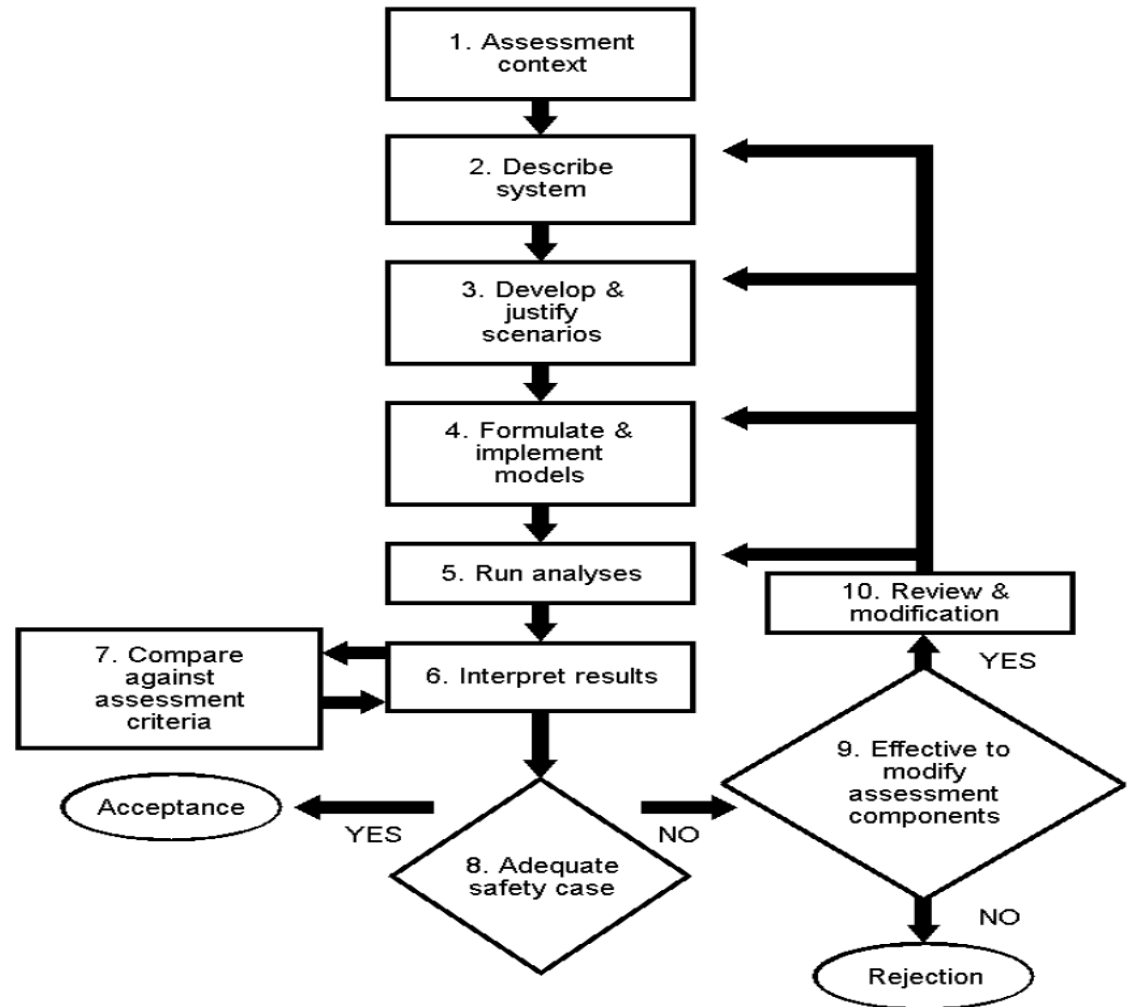

Source: Seitz (2009)

NCRP Report 152(2006), Performance Assessment of Near Surface Facilities for the Disposal of Low Level Waste defines performance assessment as an:

*Iterative process involving **site-specific, prospective modeling evaluations** of the postclosure time phase of a waste disposal system for the purpose of*

- *determining whether **reasonable assurance** of compliance with regulatory performance objectives can be demonstrated, and*
- *identifying critical data, facility design, and model development needs for **defensible and cost-effective licensing decisions** and developing **operating limits** (waste decision criteria) for specific disposal facilities. (boldface added)*

# Regulatory Framework

## Department of Energy

- DOE O 435.1 Radioactive Waste Management
- DOE M 435.1-1 Radioactive Waste Management Manual

## Nuclear Regulatory Commission

- Licensing Requirements for Land Disposal of Radioactive Waste (10CFR61)

## Environmental Protection Agency

- CERCLA (Comprehensive Environmental Response Compensation and Liability Act – “Superfund”)
- RCRA (Resource Conservation and Recovery Act)
- NEPA (National Environmental Policy Act)

## Ronald Reagan NDAA Section 3116

# Compliance Periods

- **RCRA** 30 years of post-closure monitoring and maintenance
- **CERCLA** 5 year reviews
- **Uranium Mill Tailings Closures** 200 to 1000 years design life
- **Low Level Waste Disposal Facilities** – 10,000 years recommended (NUREG 1573) (may be revised to 20,000 years)
- **HLW Geologic Repository** 1,000,000 years

# Dose Limits

**100,000 mrem** – Dose leading to ~5% chance of Fatal Cancer (UNSCEAR)

**10,000 mrem/yr** – IAEA mandatory intervention

**5,000 mrem/yr** – Worker dose standard

**1,000 mrem/yr** – IAEA reference level for intervention for cleanup situations

**360 mrem/yr** – US Average dose all sources (NCRP)

**100 mrem/yr** – All sources limit (IAEA practices, DOE)

**25 mrem/yr** – NRC and DOE LLW

**15 mrem/yr** – EPA Radiation (40 CFR 191)

**10 mrem/yr** – Air (atmospheric) (40 CFR 61)


**4 mrem/yr** – Drinking Water (40 CFR 141)

**1 mrem/yr** – IAEA Exemption/Clearance

One transcontinental round-trip Flight – 5 mrem (NCRP 1987)




Air crew average – 300 mrem/yr (UNSCEAR 2000)

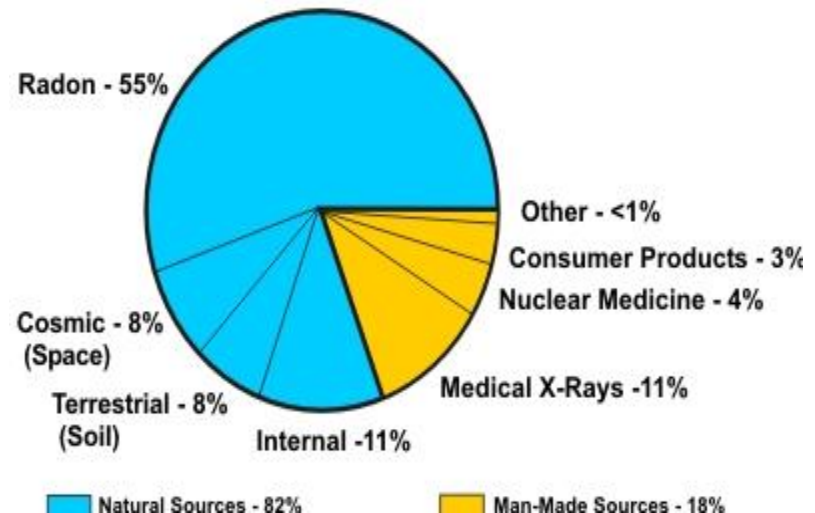

Source: Letourneau (2009)

# The Performance Evaluation Process

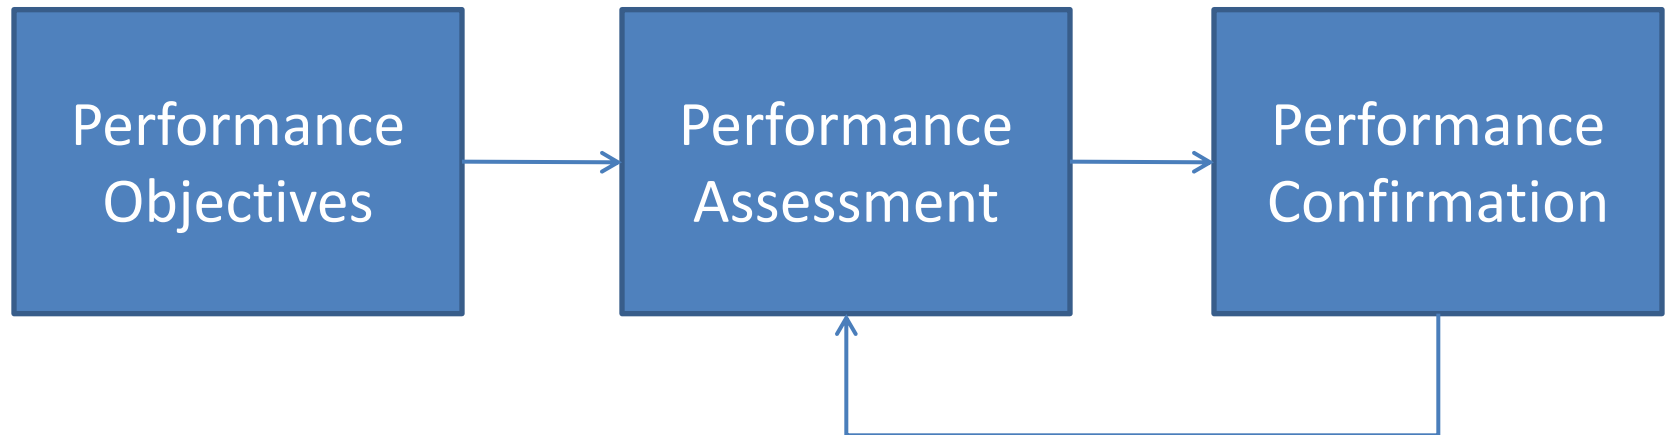



# Example EM PA and PA-like Analysis Applications



CERCLA Disposal Cell



LLW Disposal  
Engineered Trench



LLW Disposal  
in Vaults



LLW Disposal  
Grouted in Vault




Reactor D&D



Large Facility Closure



Tank Closure

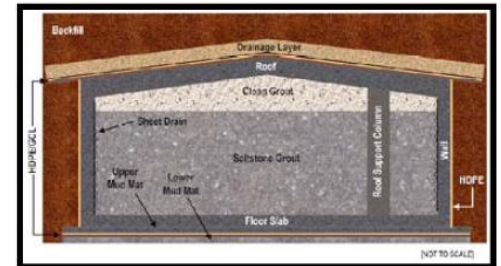




Saltstone Vault Disposal

**Engineered materials assessed** – grout waste form and fill, concrete containers and walls, metal tanks and containers, activated metal waste, vitrified waste, tank residual solids, contaminated soils and debris, resins,...

Source: Letourneau (2009)

# Historical Disposal Practices

Source: Sykes (2002)

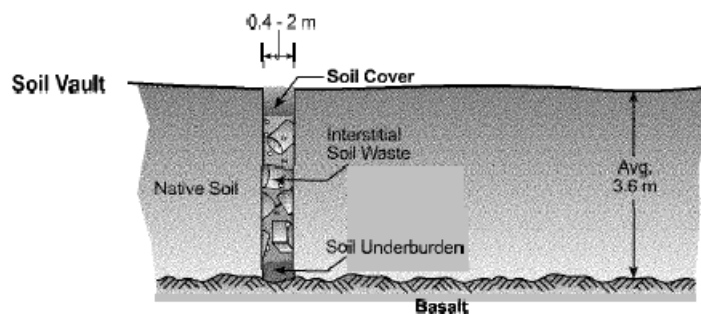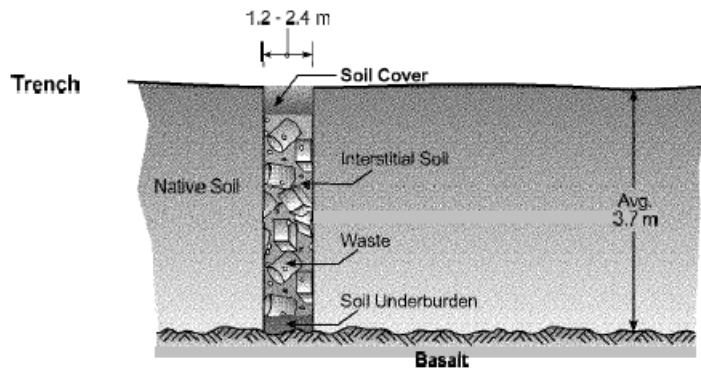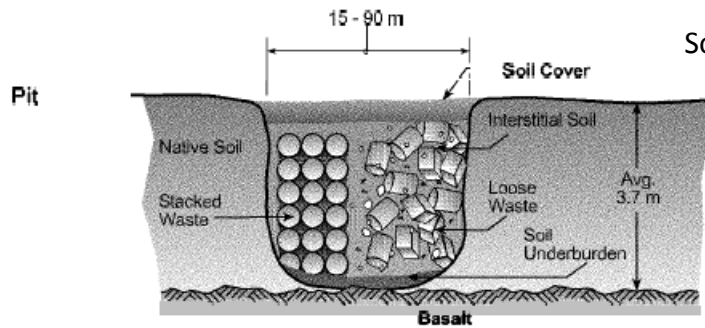

Generic cross-sections (SDA)



# Definitions Appropriate to Performance Assessment

**Model Calibration** – tuning model parameter values so that predictions match measured data

**Model Verification** – assuring that the resulting codes are correct and error free

**Model Validation** - ??? – difficult with compliance periods in the 100s to 1000s of years; maybe best approach is performance confirmation approaches to build confidence in the models and the overall performance assessment)

# Modeling Approaches

## Temporal


- Time independent (steady state)
- Dynamic

## Spatial

- 1, 2, 3-dimensional

## Level of complexity

- Simple (analytical)
- Complex (numerical)

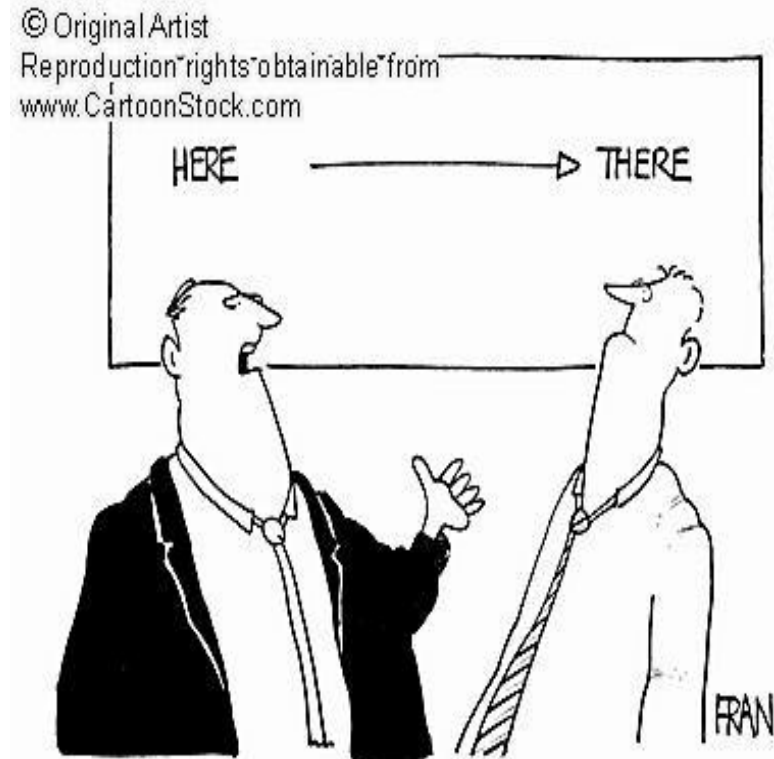


"It's a simple model... but it works for me..."




# Albert Einstein


Everything  
should be as  
simple as  
possible  
but no  
simpler.

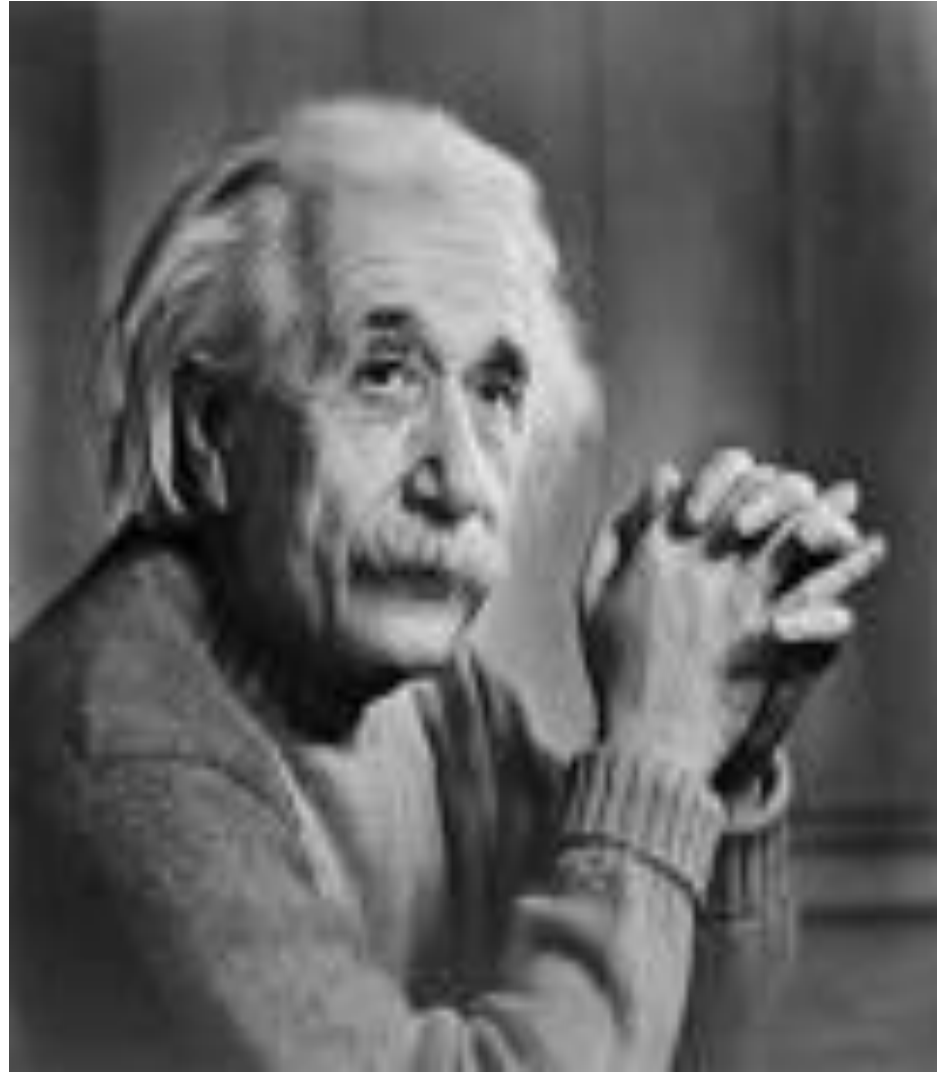

# The Performance Evaluation Process

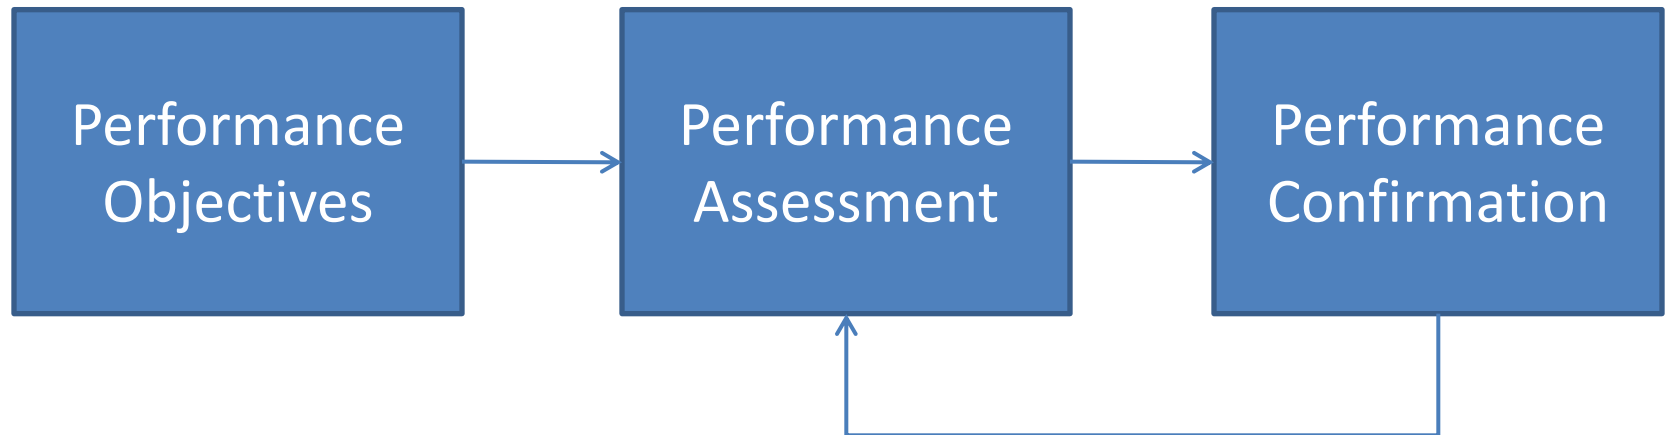

# Performance Assessment Components

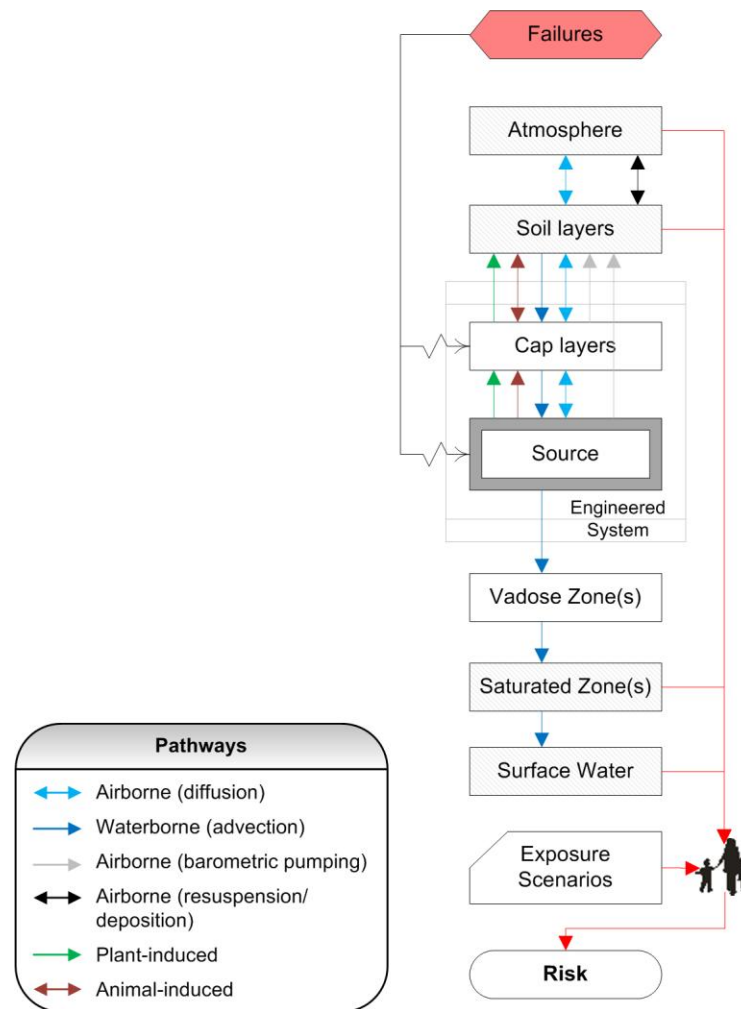

# Conceptual Model and Scenario Issues for PA Model Components


- Cover Performance
  - Hydraulic Barrier Degradation and Increased Hydraulic Conductivity
  - Erosion and Biointrusion
- Waste Form
  - Preferred Pathways and Fracture Development
  - Radionuclide Release Processes and Scenarios
- Subsurface Fluid Flow and Radionuclide Transport
  - Fracture Flow
  - Equivalent Continuum, Discrete Fracture Networks, Stochastic Approaches
  - Radionuclide Attenuation (sorption, matrix diffusion, chemical reaction)
  - Water Chemistry and Radionuclide Mobility



# Major Steps in a Performance Assessment

- **Select (and screen) Features, Events, and Processes (FEPs) and develop scenario classes**
- **Develop process models** (and, perhaps, abstractions or reduced-order models) along with their scientific basis
- **Evaluate parameter and model uncertainty**
- **Construct integrated system model** with a consistent treatment of uncertainty
- **Evaluate system model results**, including the effects of uncertainty (conduct uncertainty/sensitivity analyses)
- **Iterate**

Source: Sevougian (2009)

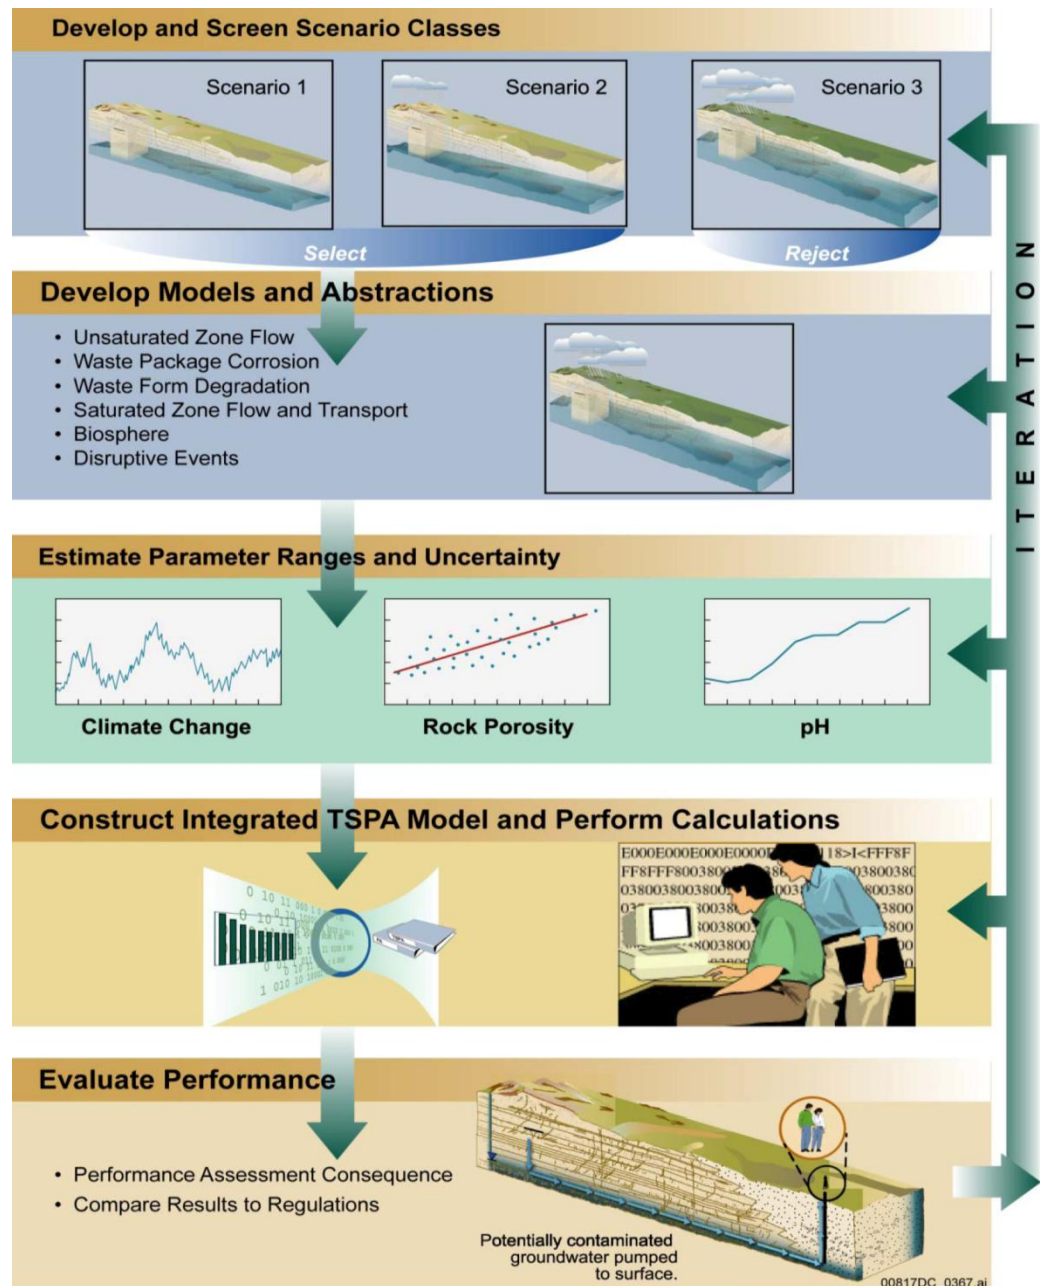

# Niels Bohr

Prediction is  
very difficult,  
especially if  
it's about the  
future.



# George E.P. Box

Professor Emeritus of Statistics  
University of Wisconsin

“All models are  
wrong, but  
some are  
useful.”

Box, George E. P. and Norman  
R. Draper, *Empirical Model-  
Building and Response  
Surfaces*, p. 424, Wiley, 1987.



# Conceptual Site Models for Contaminated Sites

The American Society for Testing and Materials (ASTM) defines a conceptual site model as

“... a written or pictorial representation of an environmental system and the biological, physical, and chemical processes that determine the transport of contaminants from sources through environmental media to environmental receptors within the system.”

In their report on Conceptual Models of Flow and Transport in the Fractured Vadose Zone (NRC, 2001) the National Academies Committee on Fracture Characterization and Fluid Flow developed the following definition of a conceptual model for the purposes of their study:

*“A conceptual model is an evolving hypothesis identifying the important **features, events and processes** (boldface added) controlling fluid flow and contaminant transport of consequence at a specific field site in the context of a recognized problem.”*


The Committee goes on to say that

*“A conceptual model is an hypothesis because it must be tested for internal consistency and for its ability to represent the real system in a meaningful way. **The hypothesis evolves (is revised and refined) during testing and as new information is gathered** (boldface added).”*

# Conceptual Site Models (CSM)


- Conceptual site models link **sources** of contamination to **potential receptors**, both human and ecological, through **environmental transport pathways** and **exposure routes**.
- Conceptual site models are powerful tools for site characterization, risk assessment and the evaluation of different remediation technologies and strategies
- Conceptual site models are depicted in different ways, using flow charts and environmental cross sections.

# Conceptual Site Model (CSM)

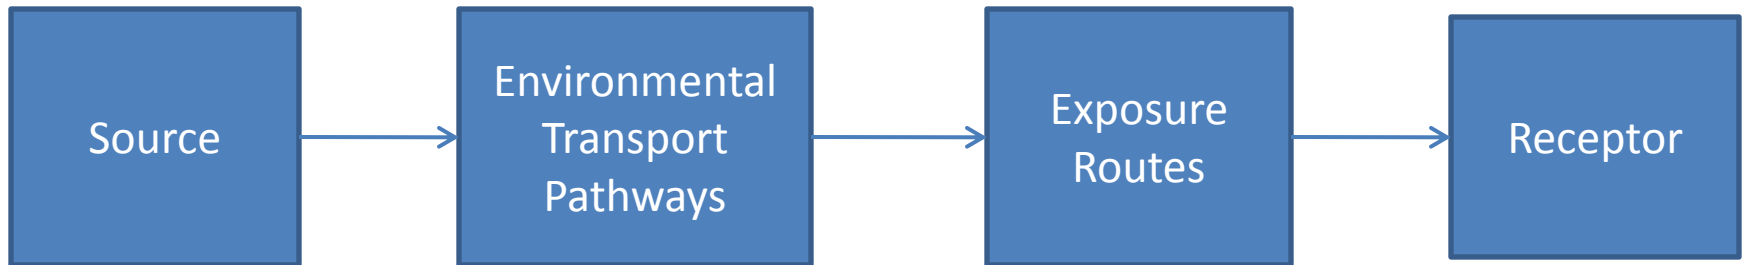


A conceptual site model links sources to receptors through environmental transport pathways and exposure routes




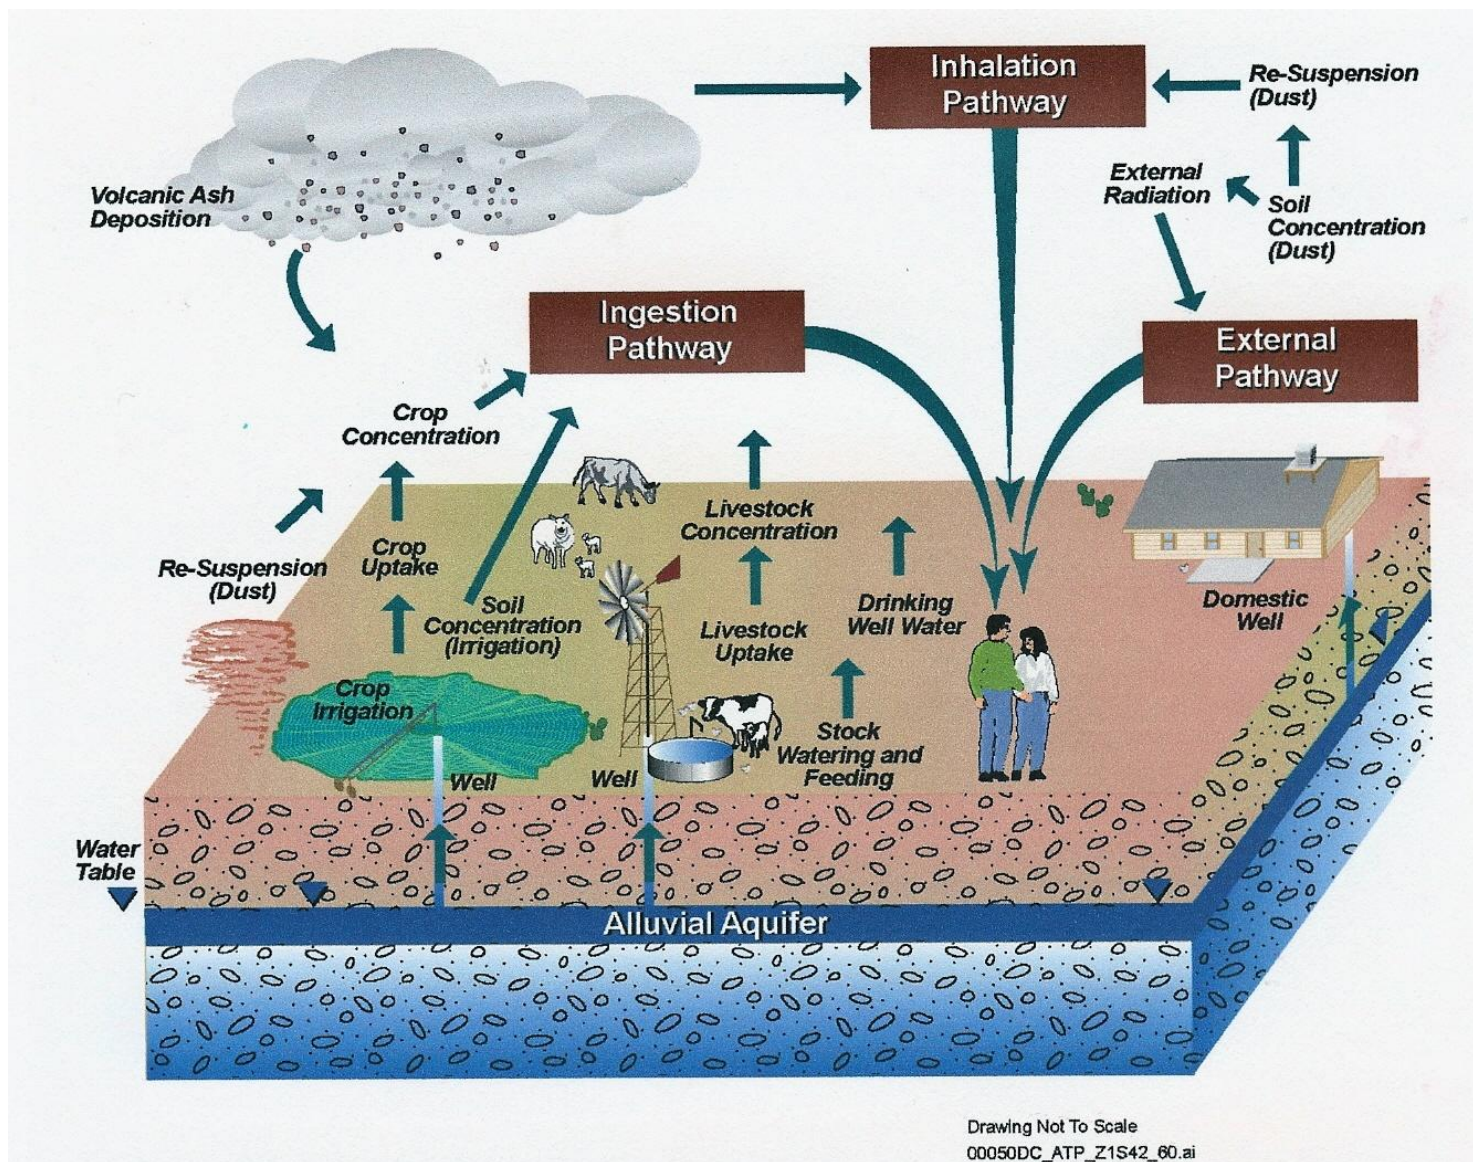



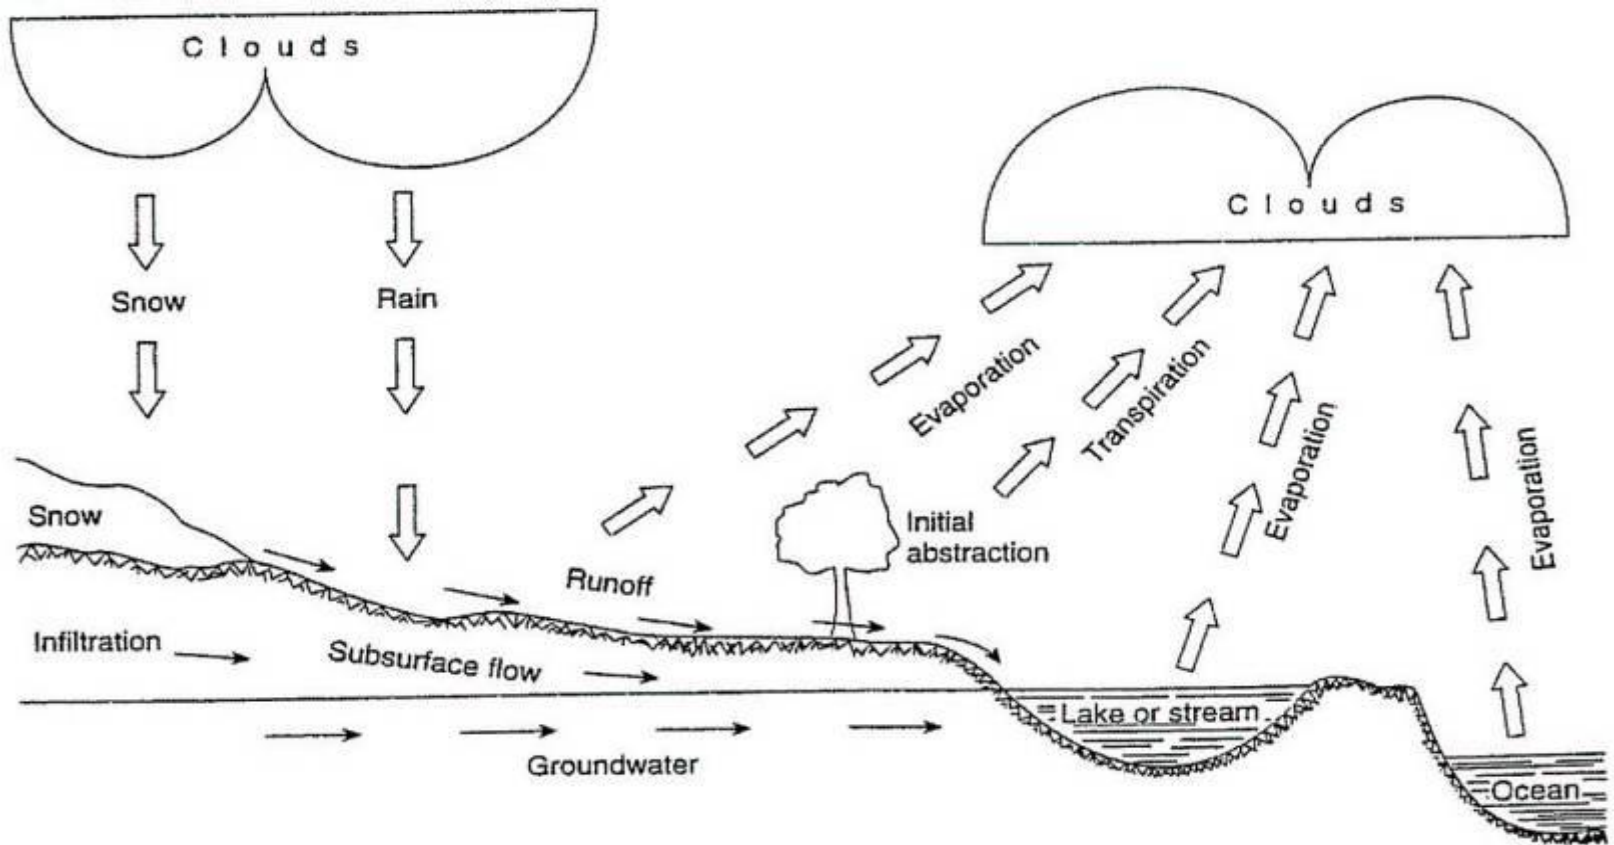



# The Hydrologic Cycle

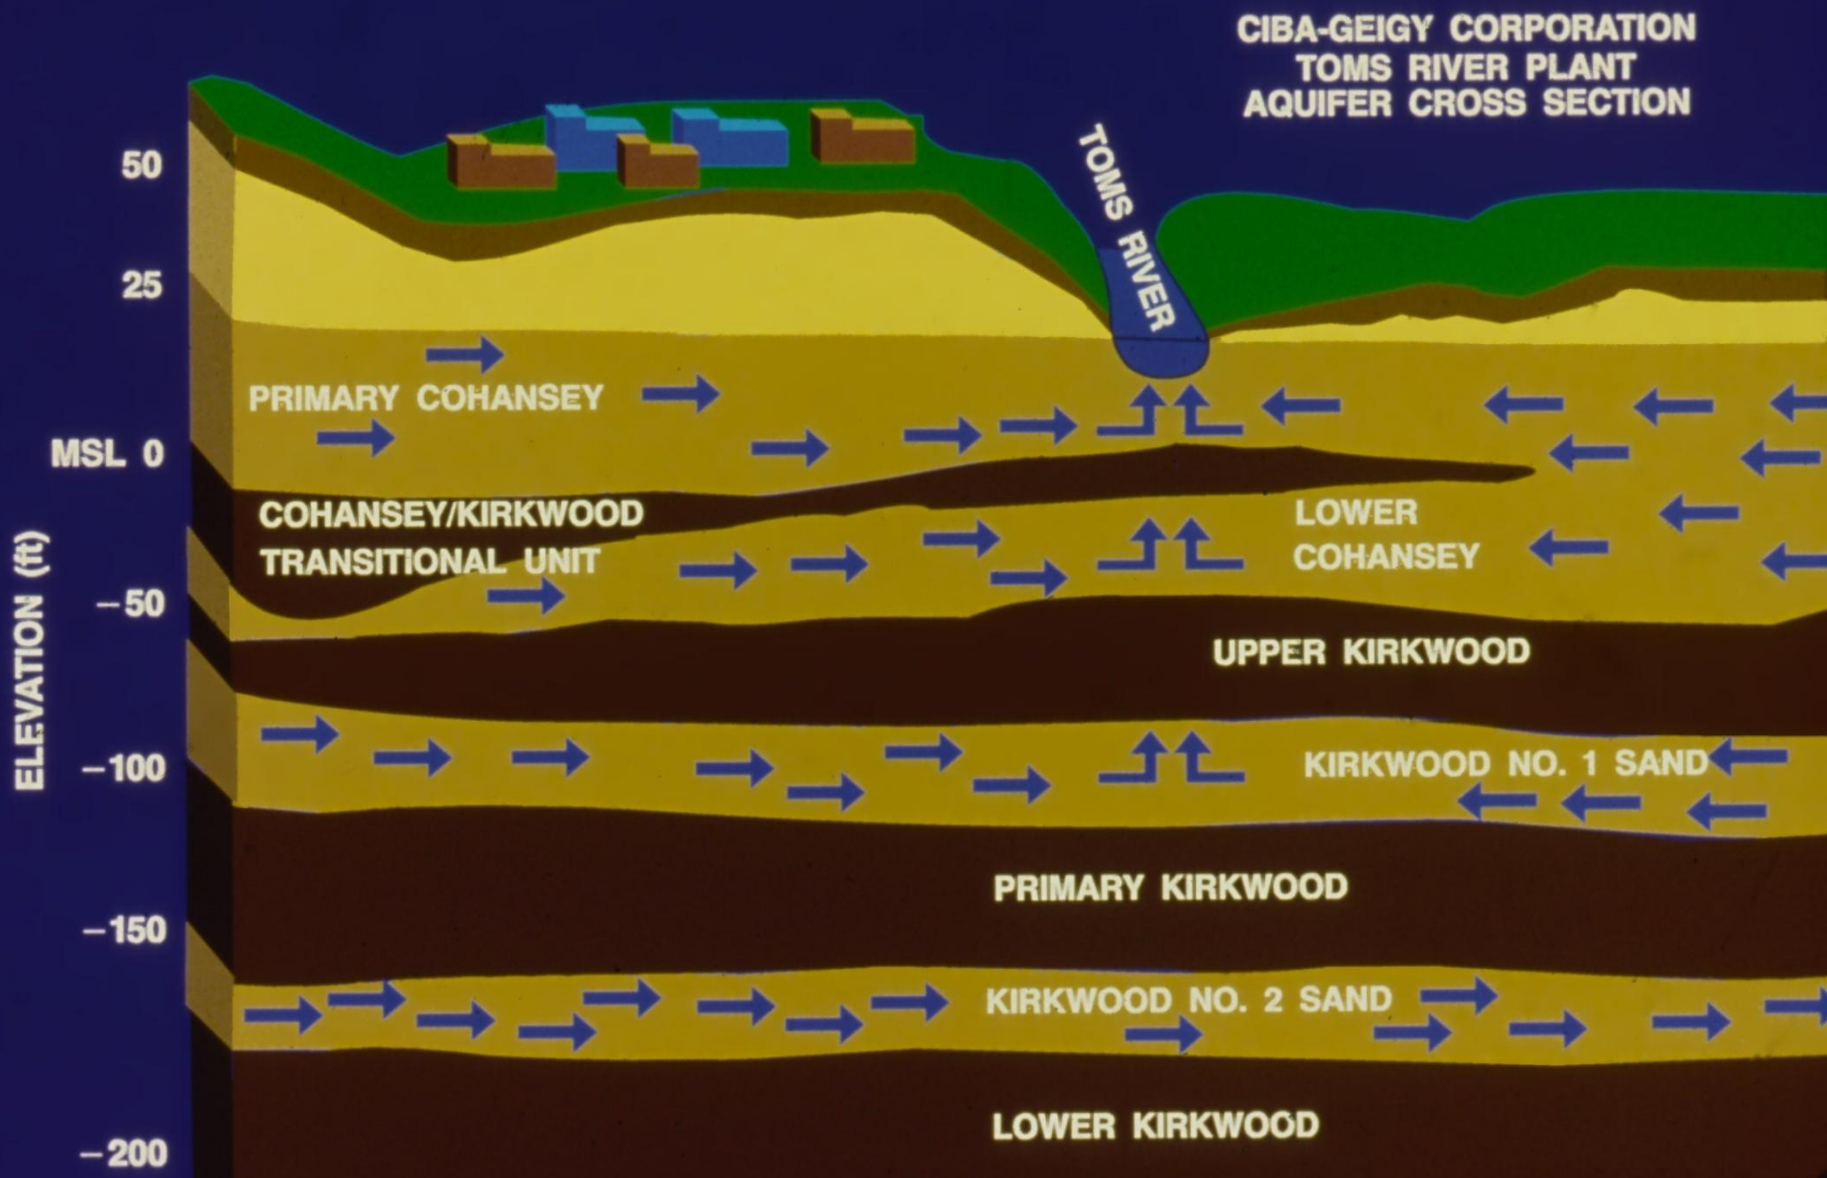

Inter-Bedded Silts and Sands in NJ Coastal Sediments


01-GA50385-01



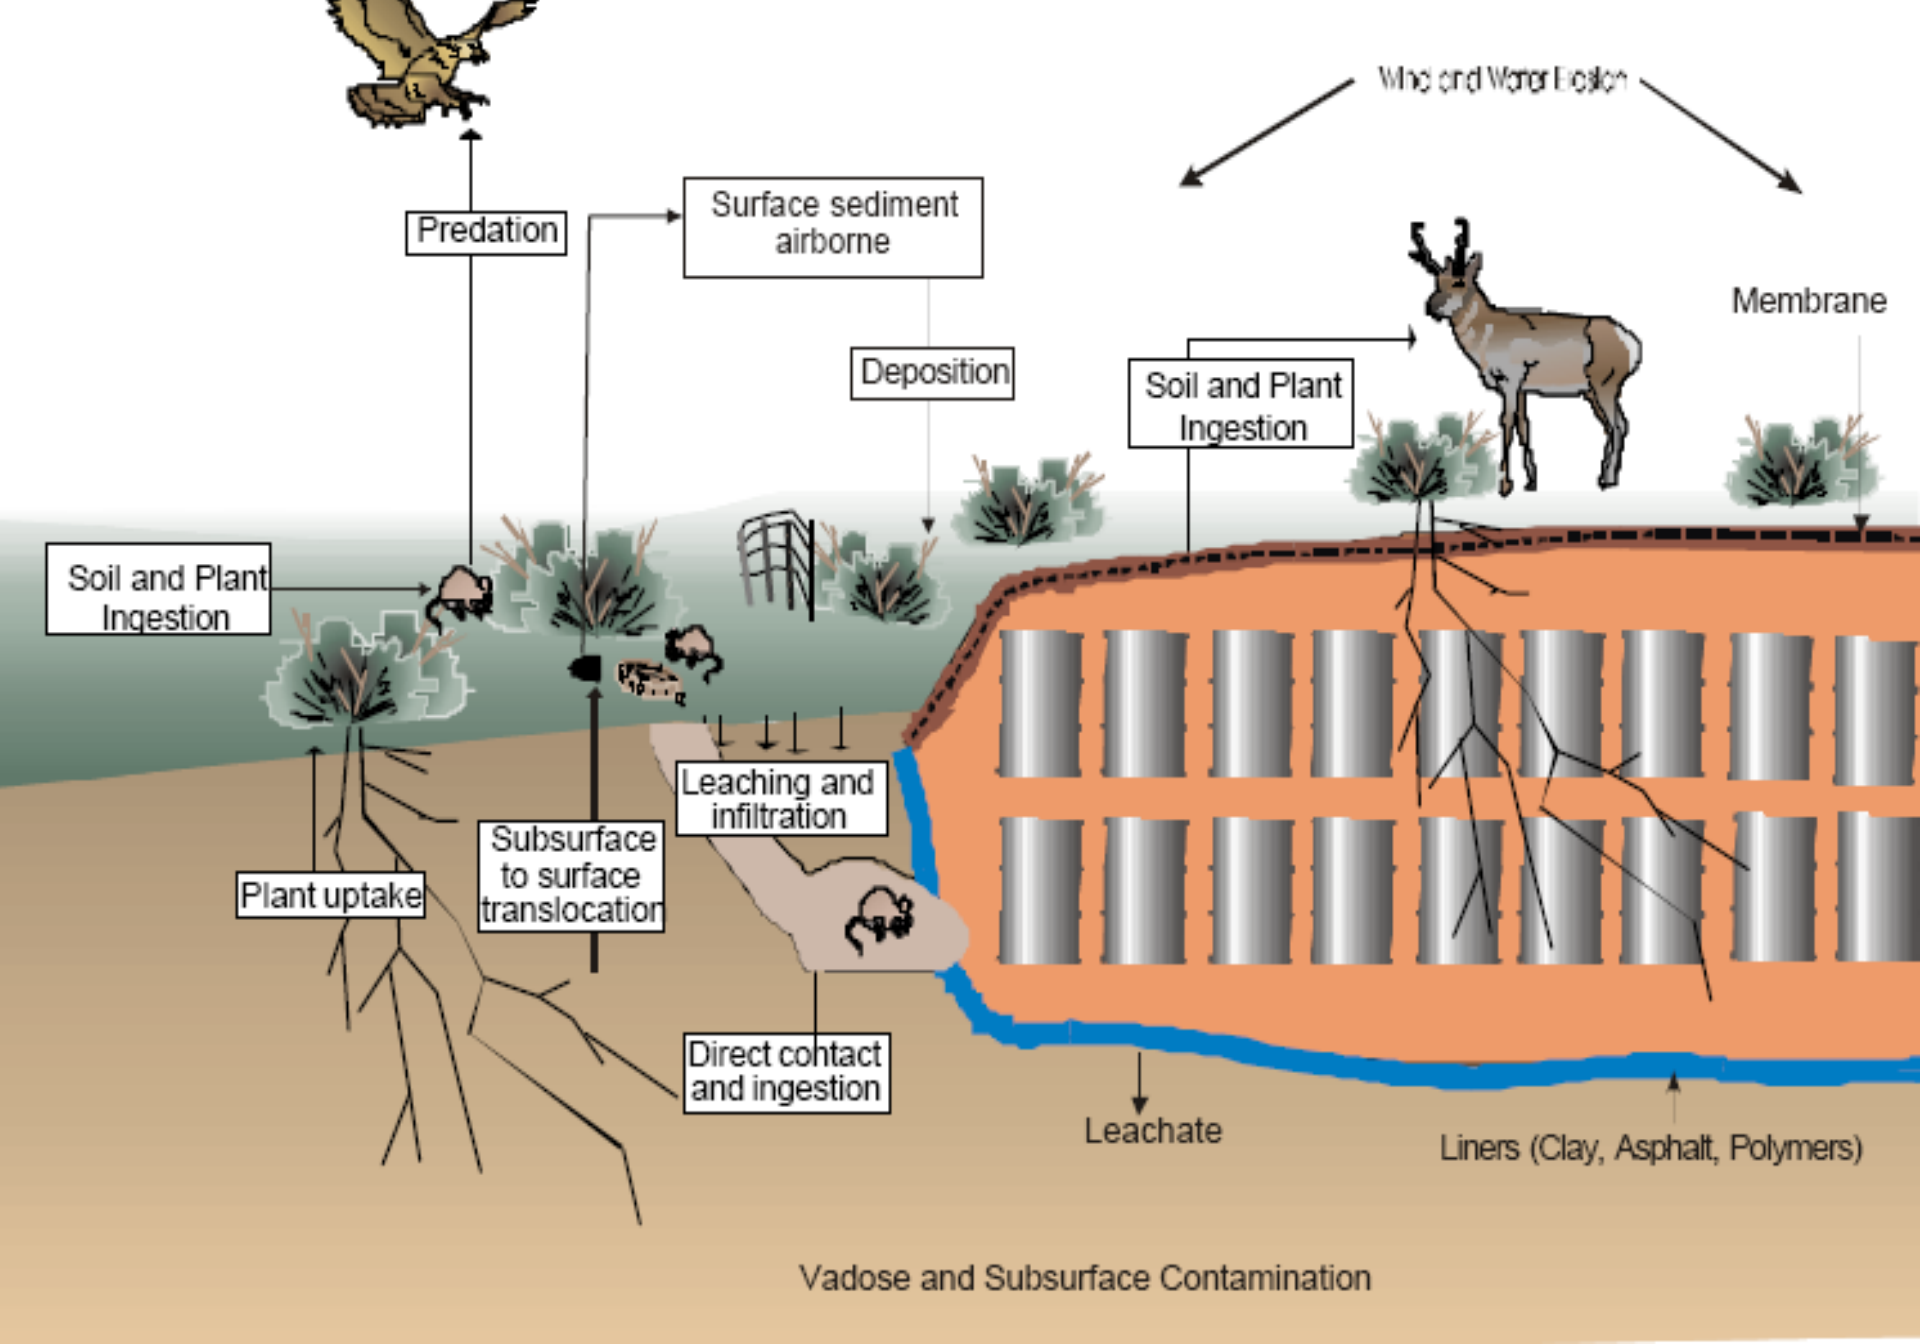




# RCRA Subtitle 'C' Profile

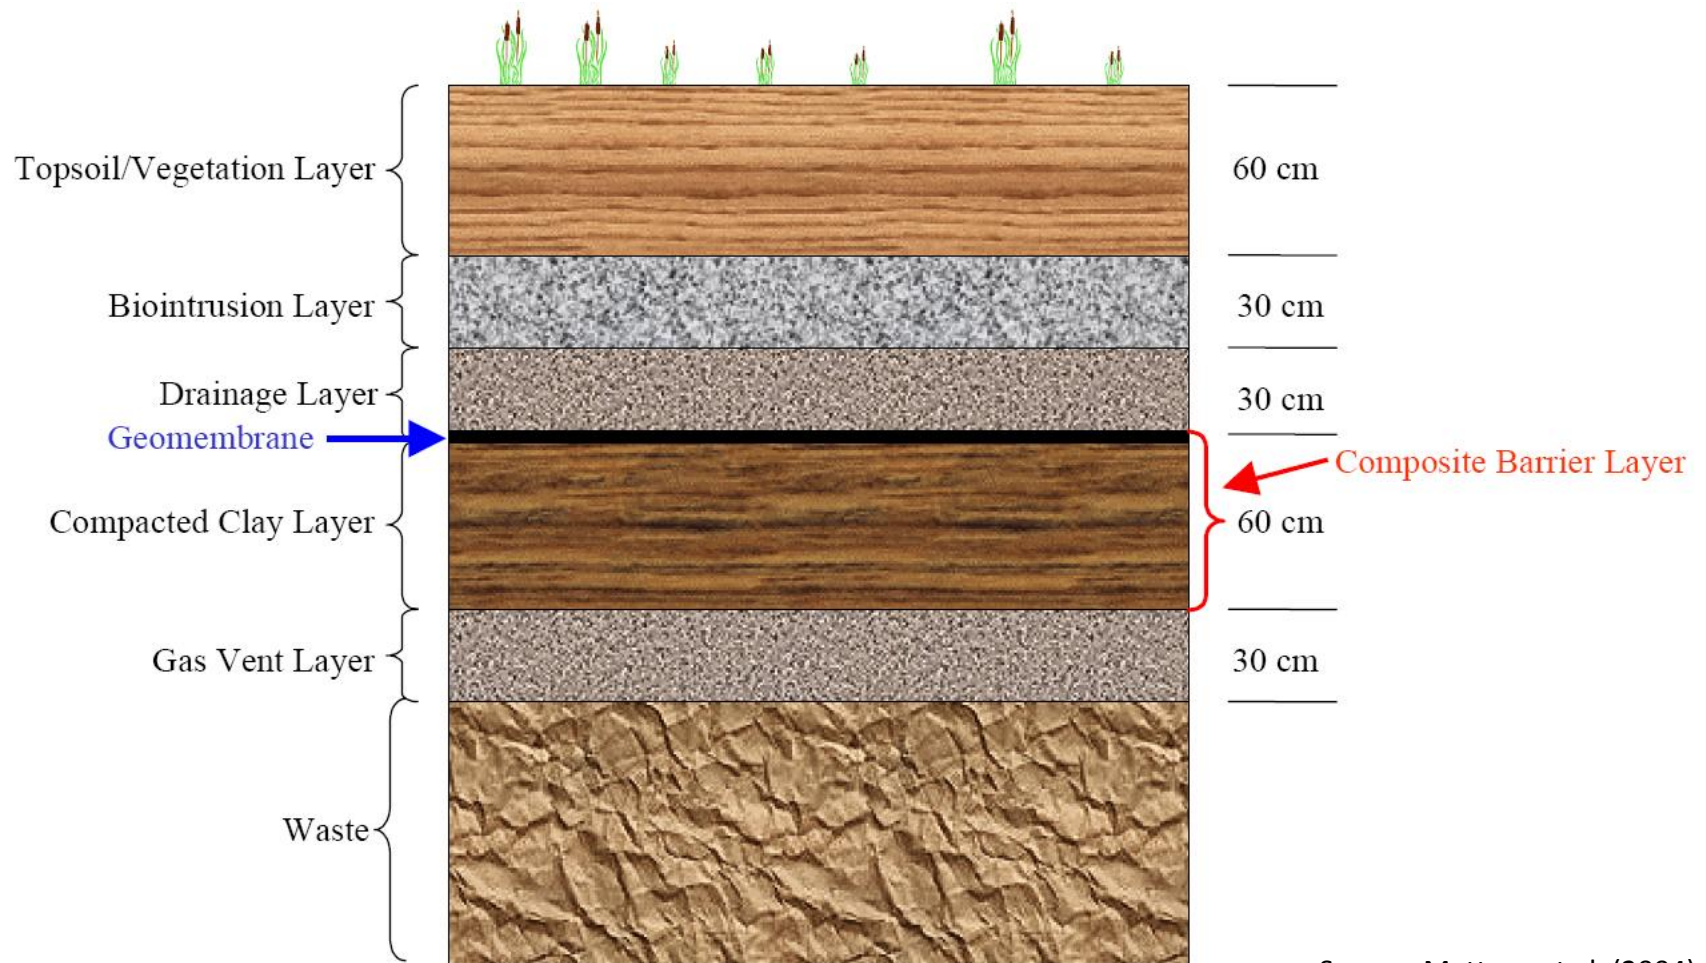


Source: Mattson et al. (2004)


## Current Approach To Cover System Design Emphasizes Prevention of Infiltration Into The Waste/Contaminated Medium

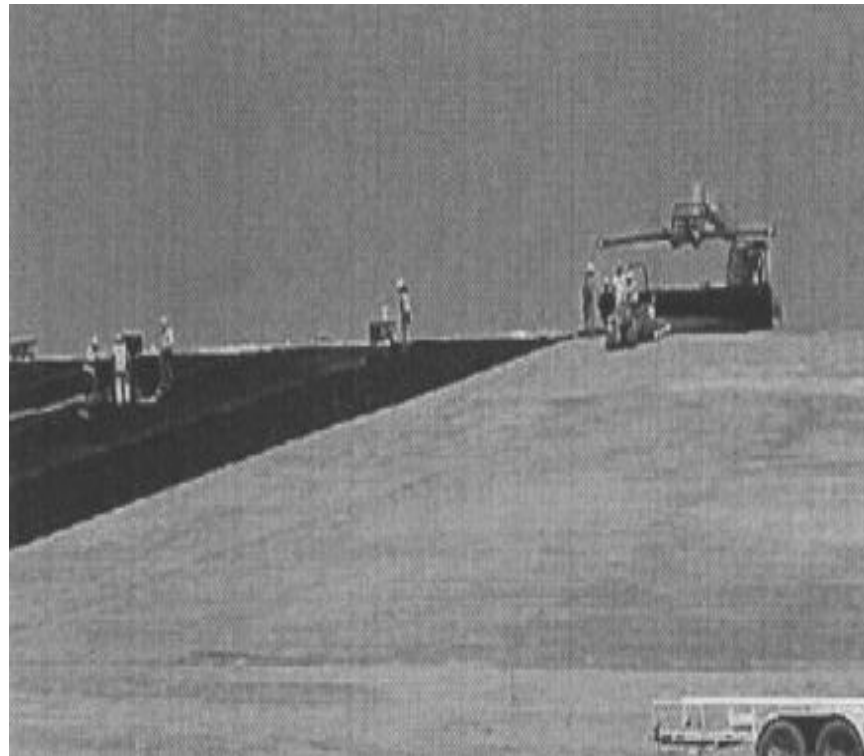


# Total Systems View of a Contaminant Isolation Facility

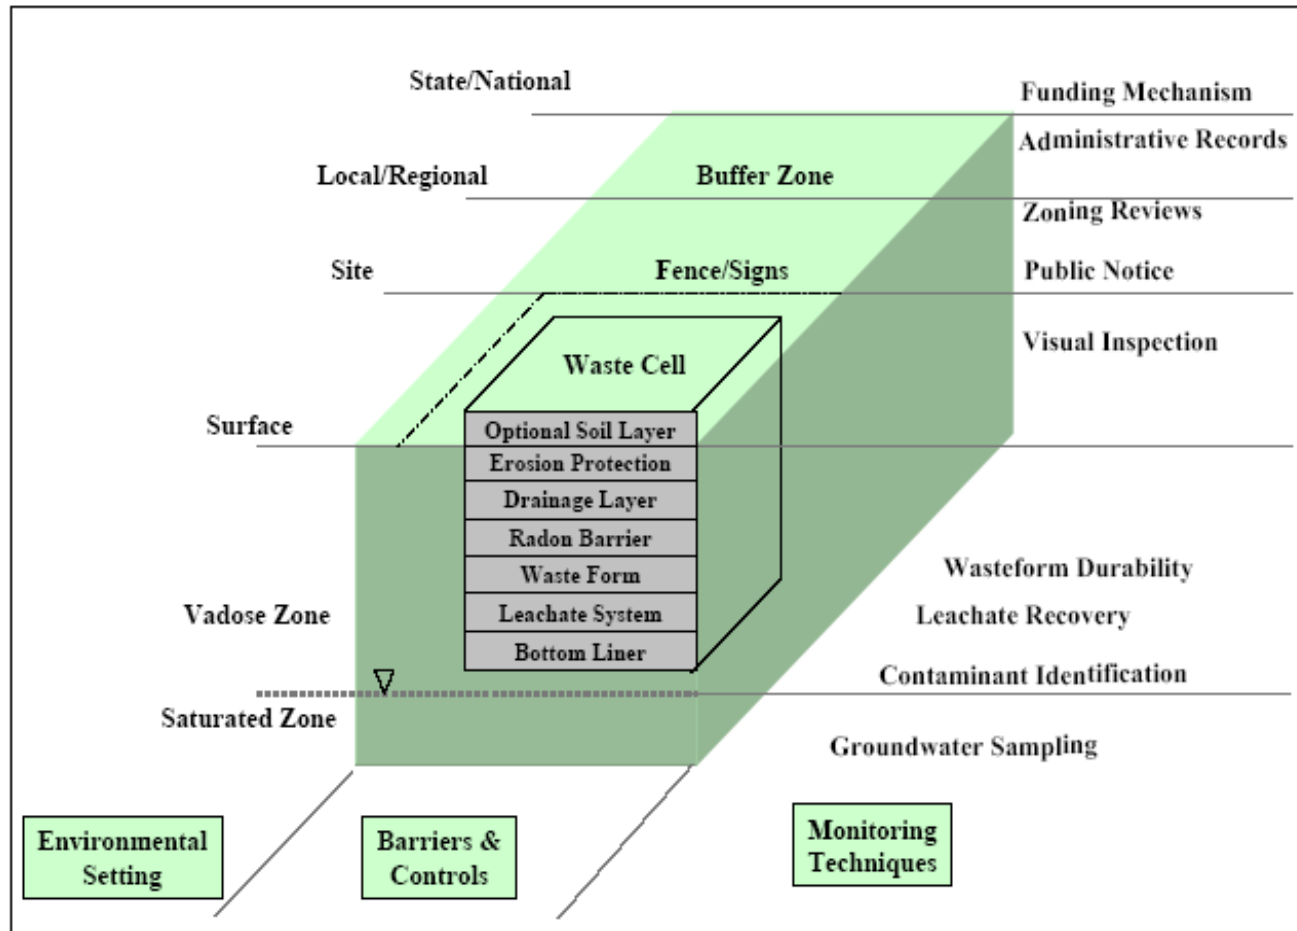


# Information Management Errors

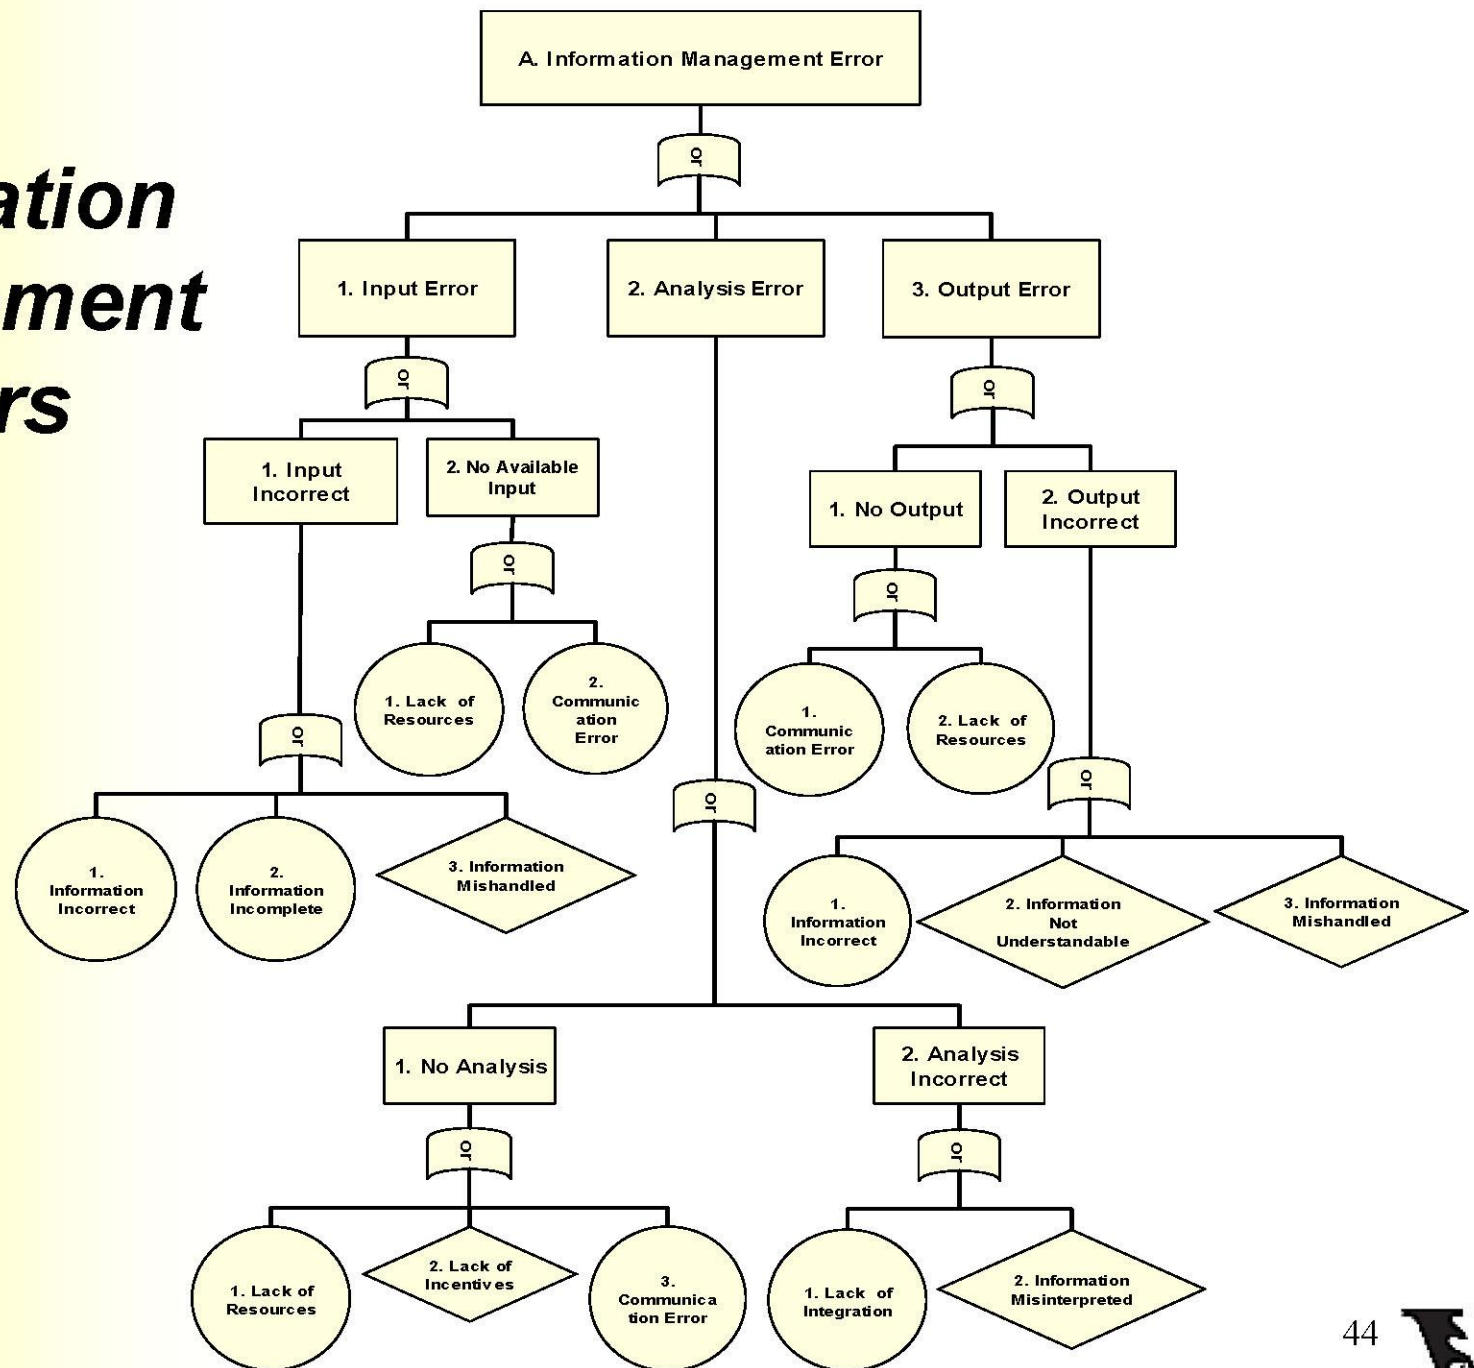




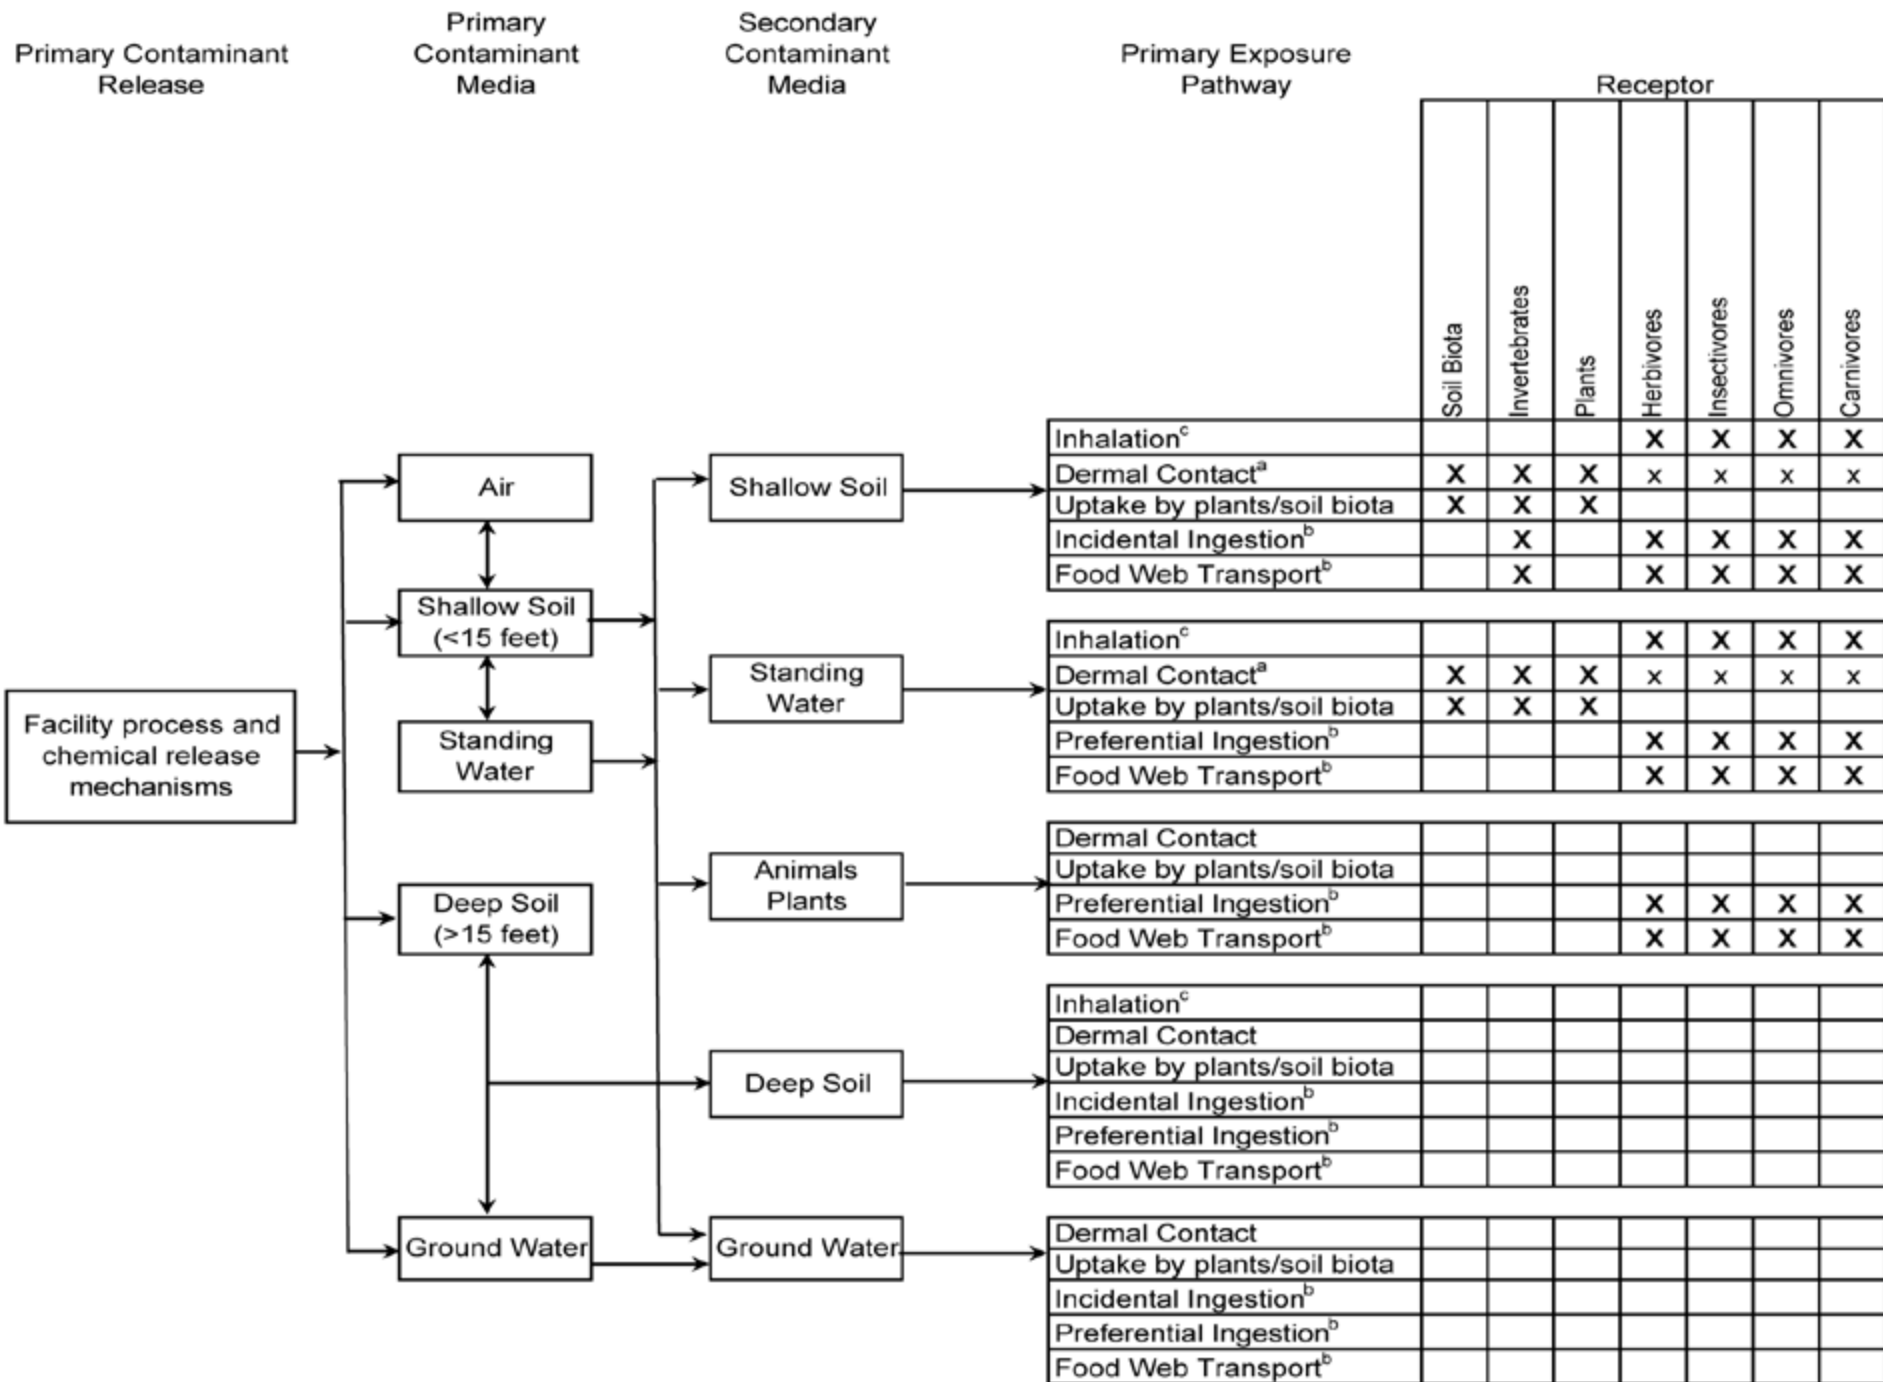


**Notes:**  
 X = Complete and significant pathway

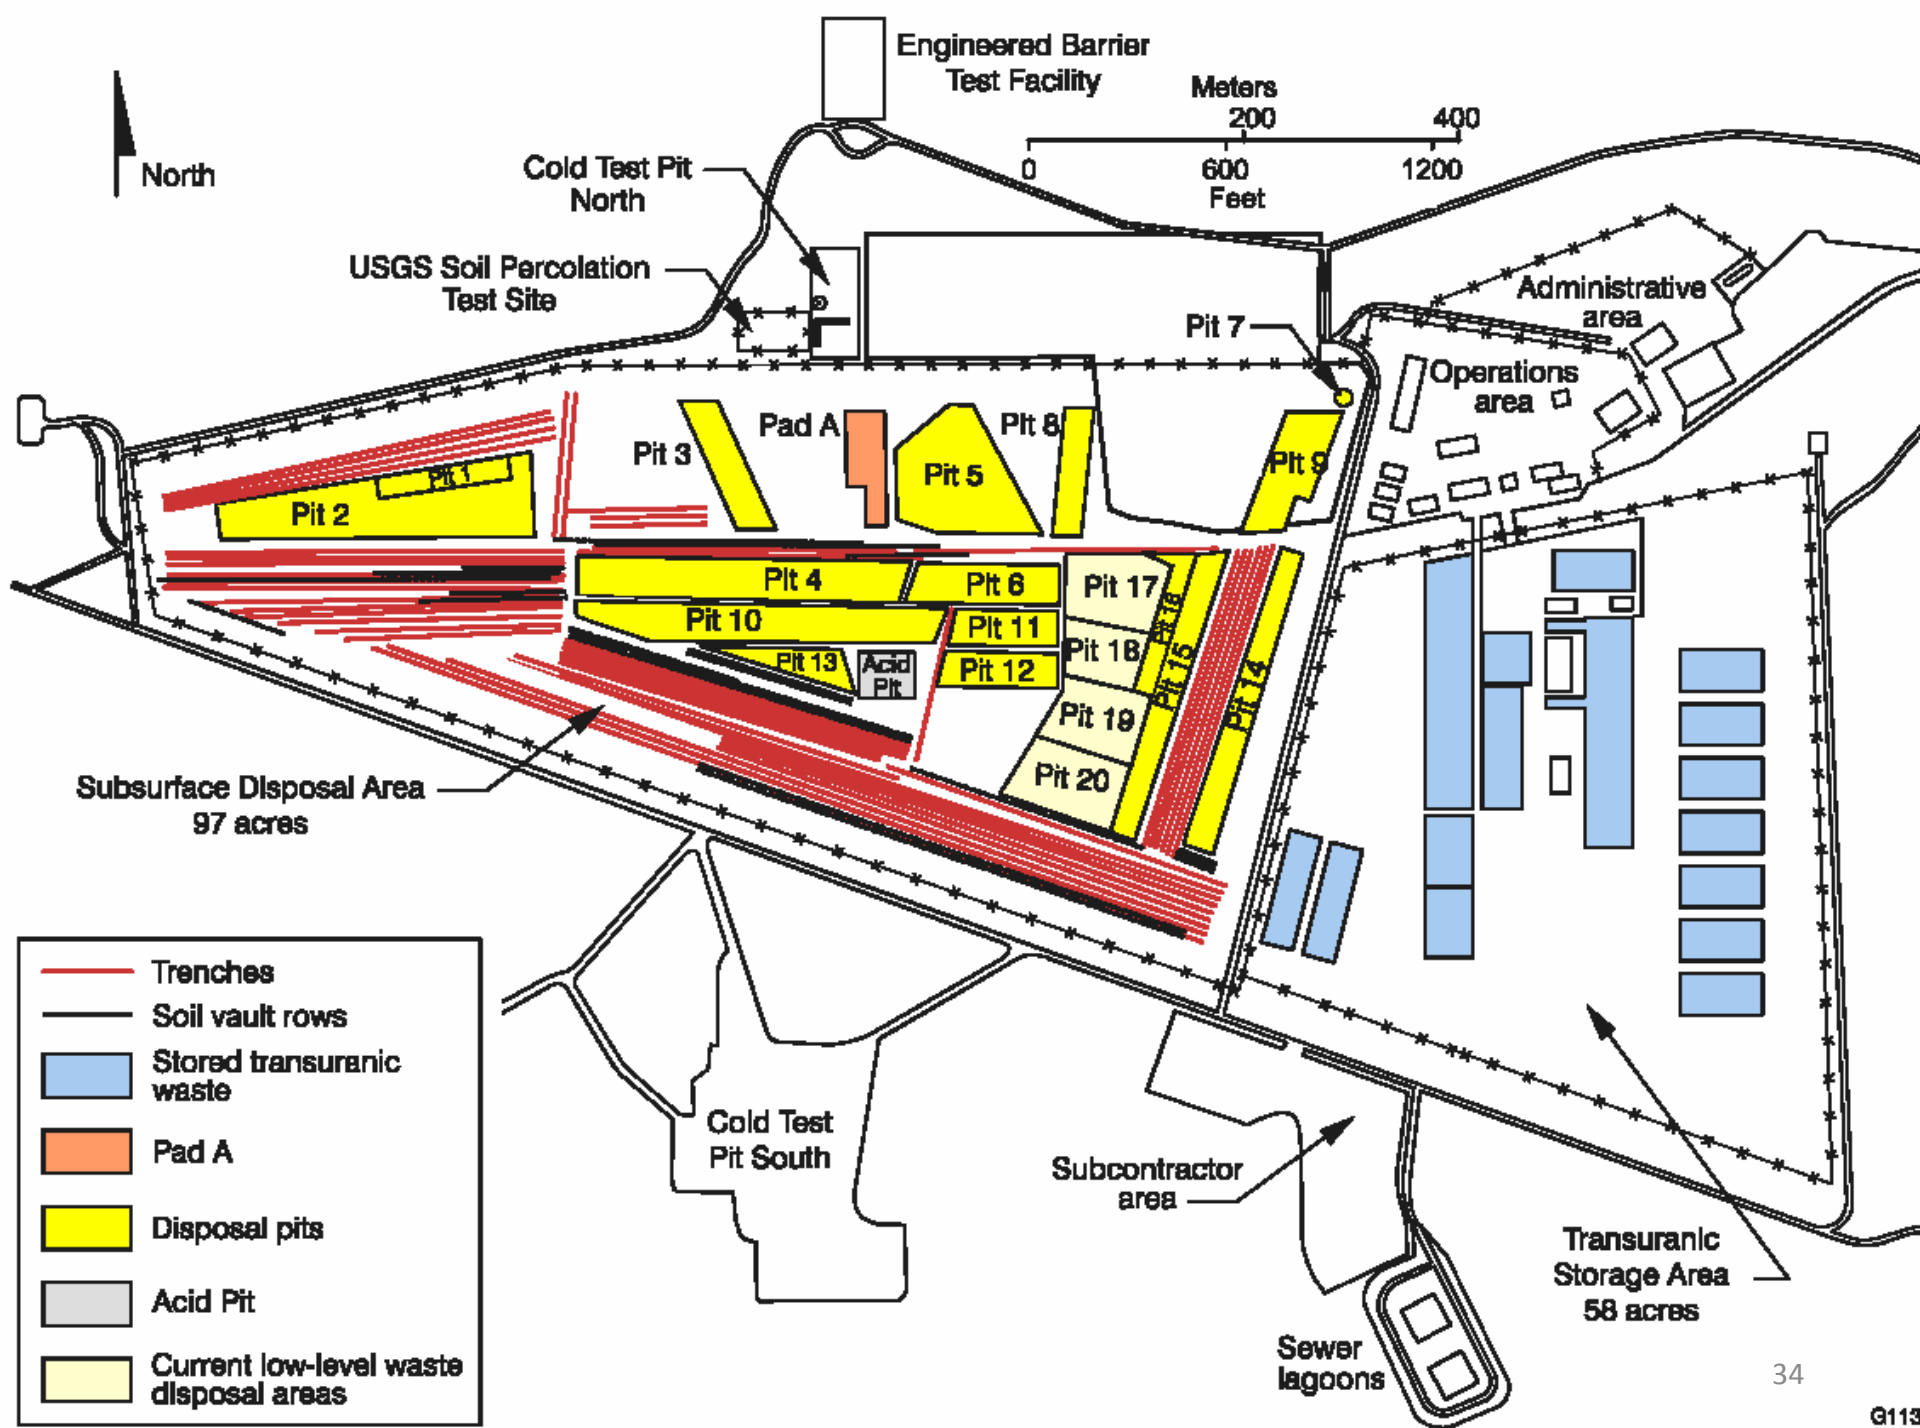

# Conceptual Burial Site Model

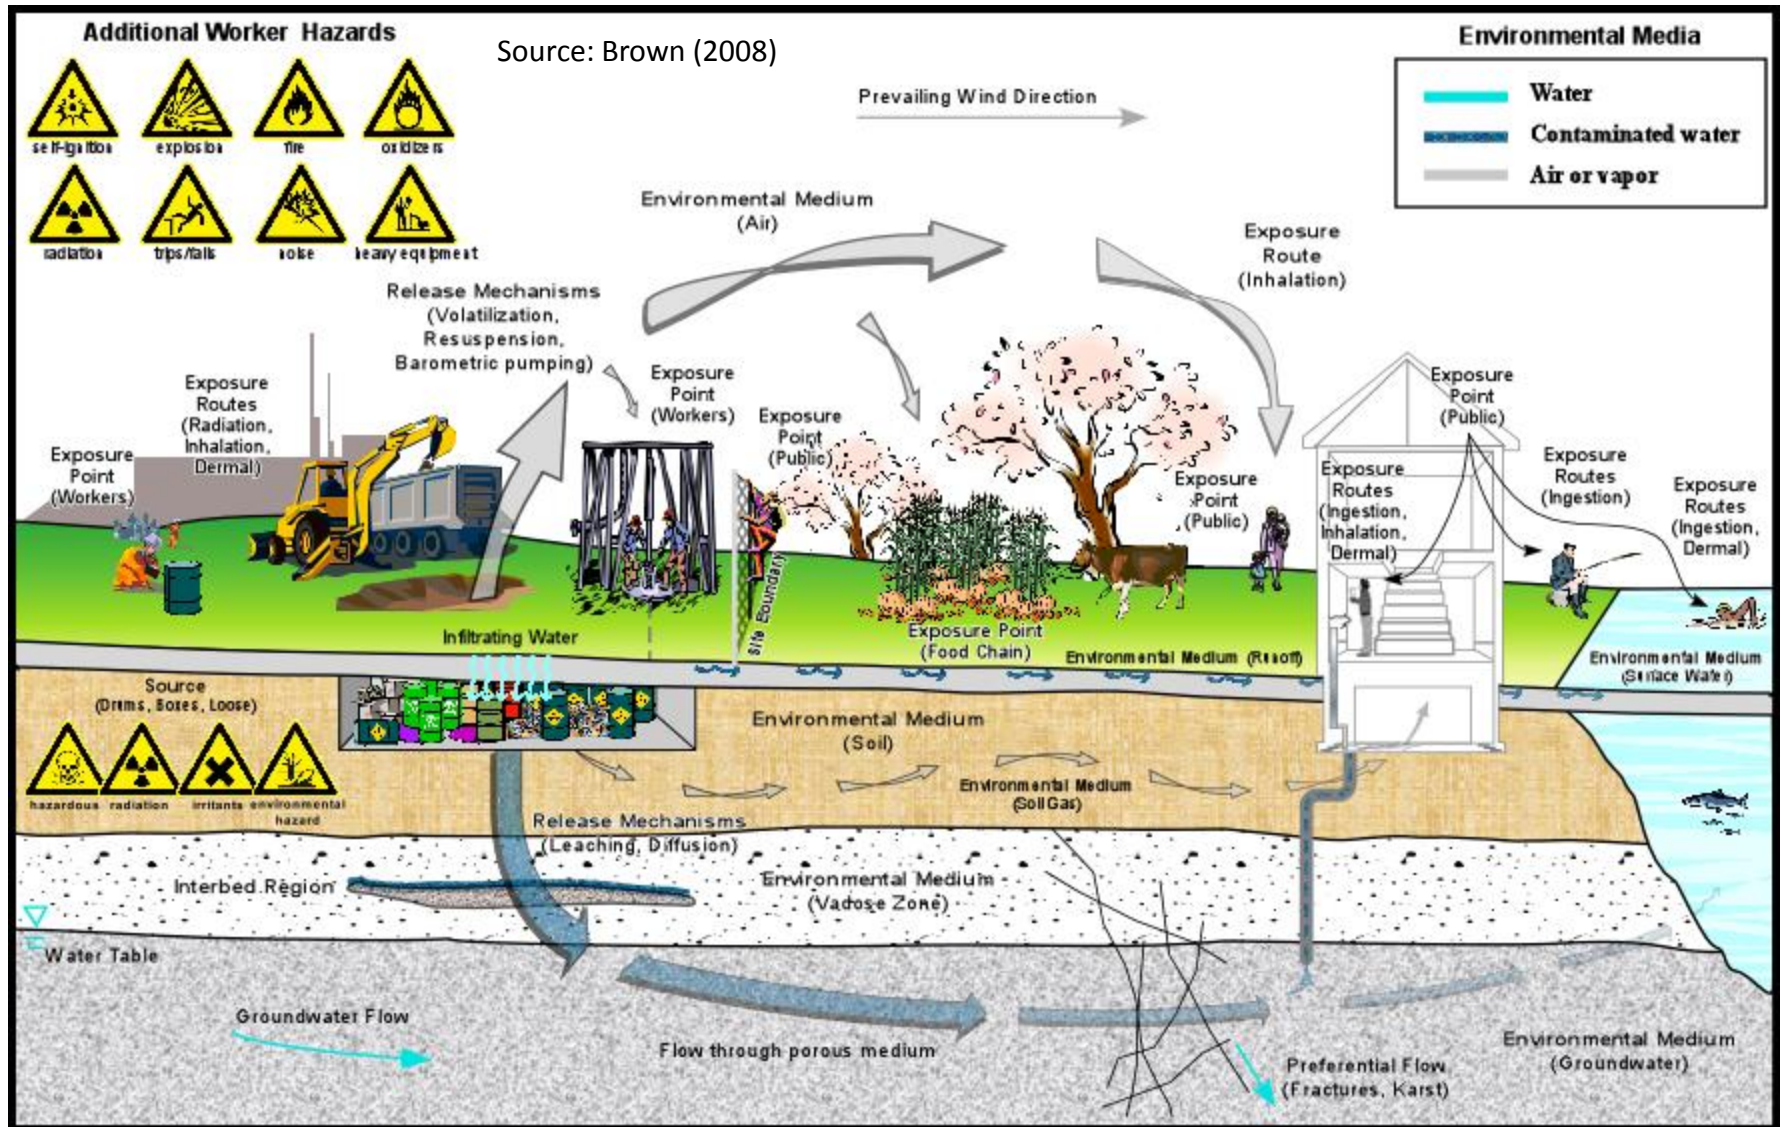


# Novel CSM – Remedial Actions

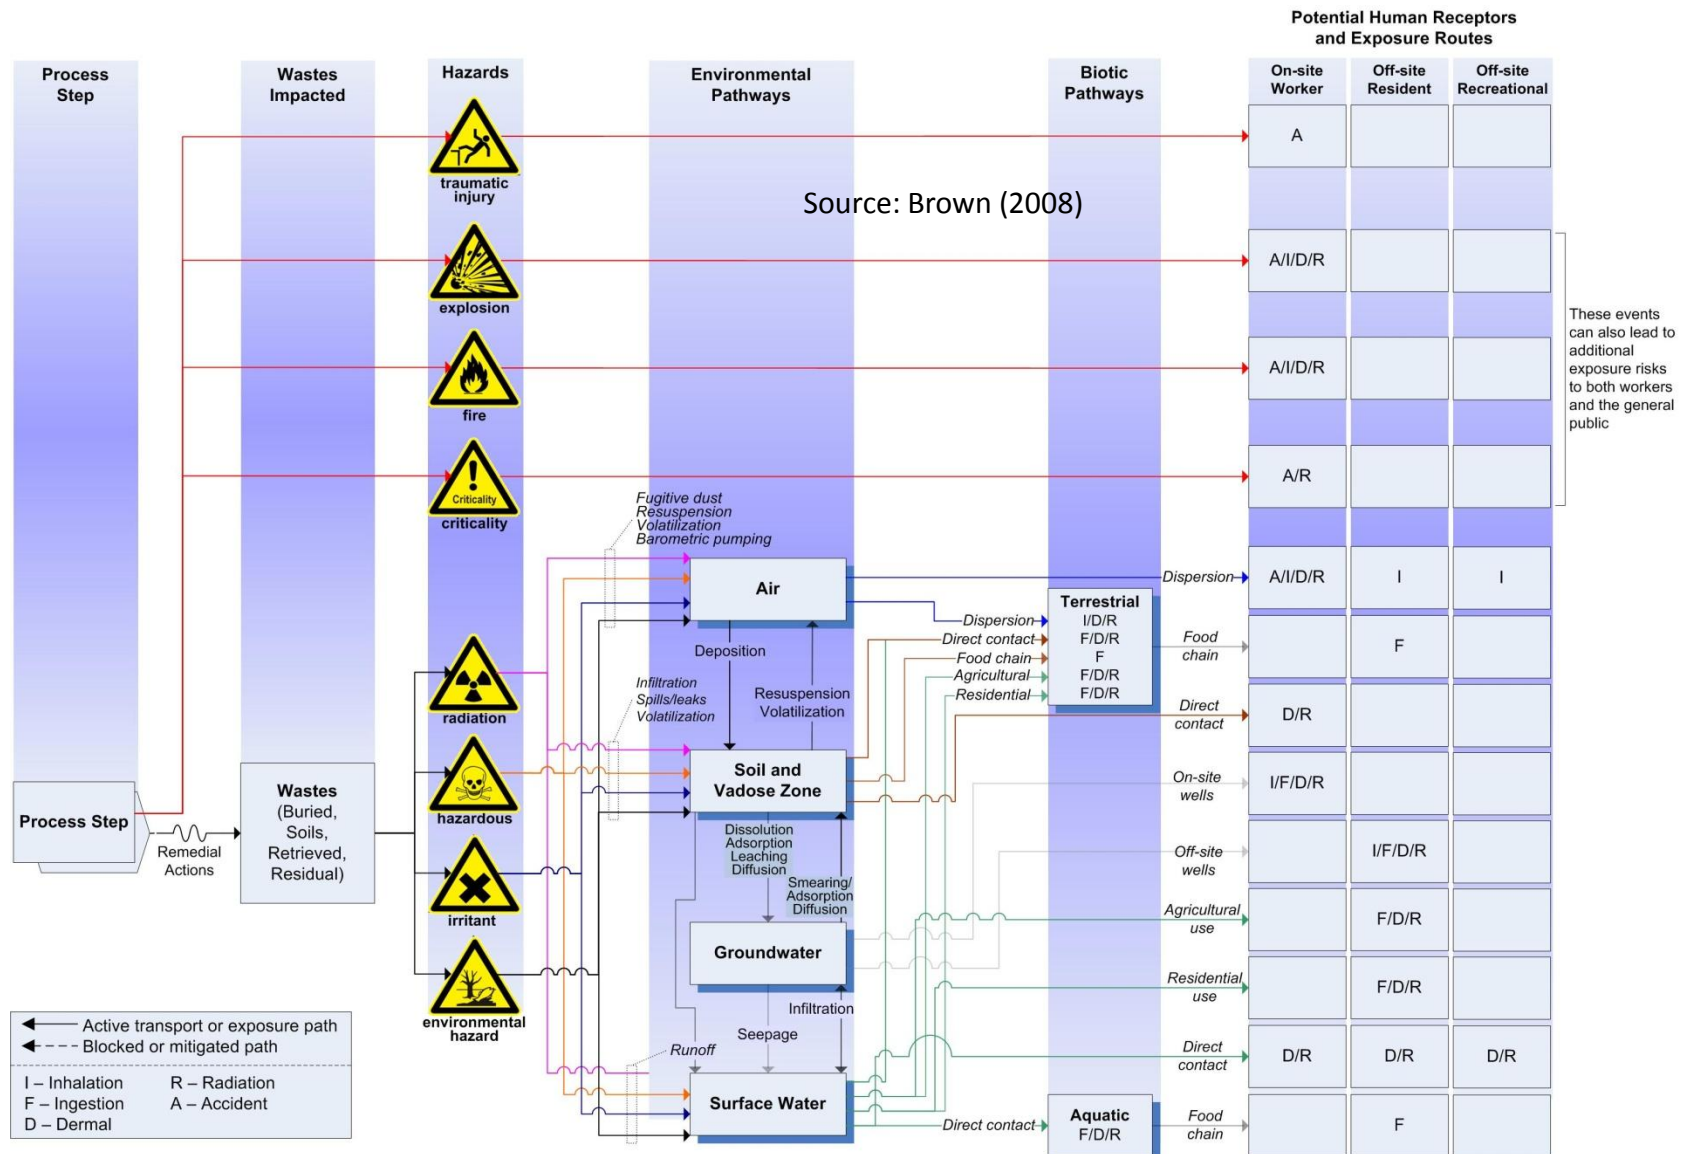



# Improved Conceptual Site Model (CSM)

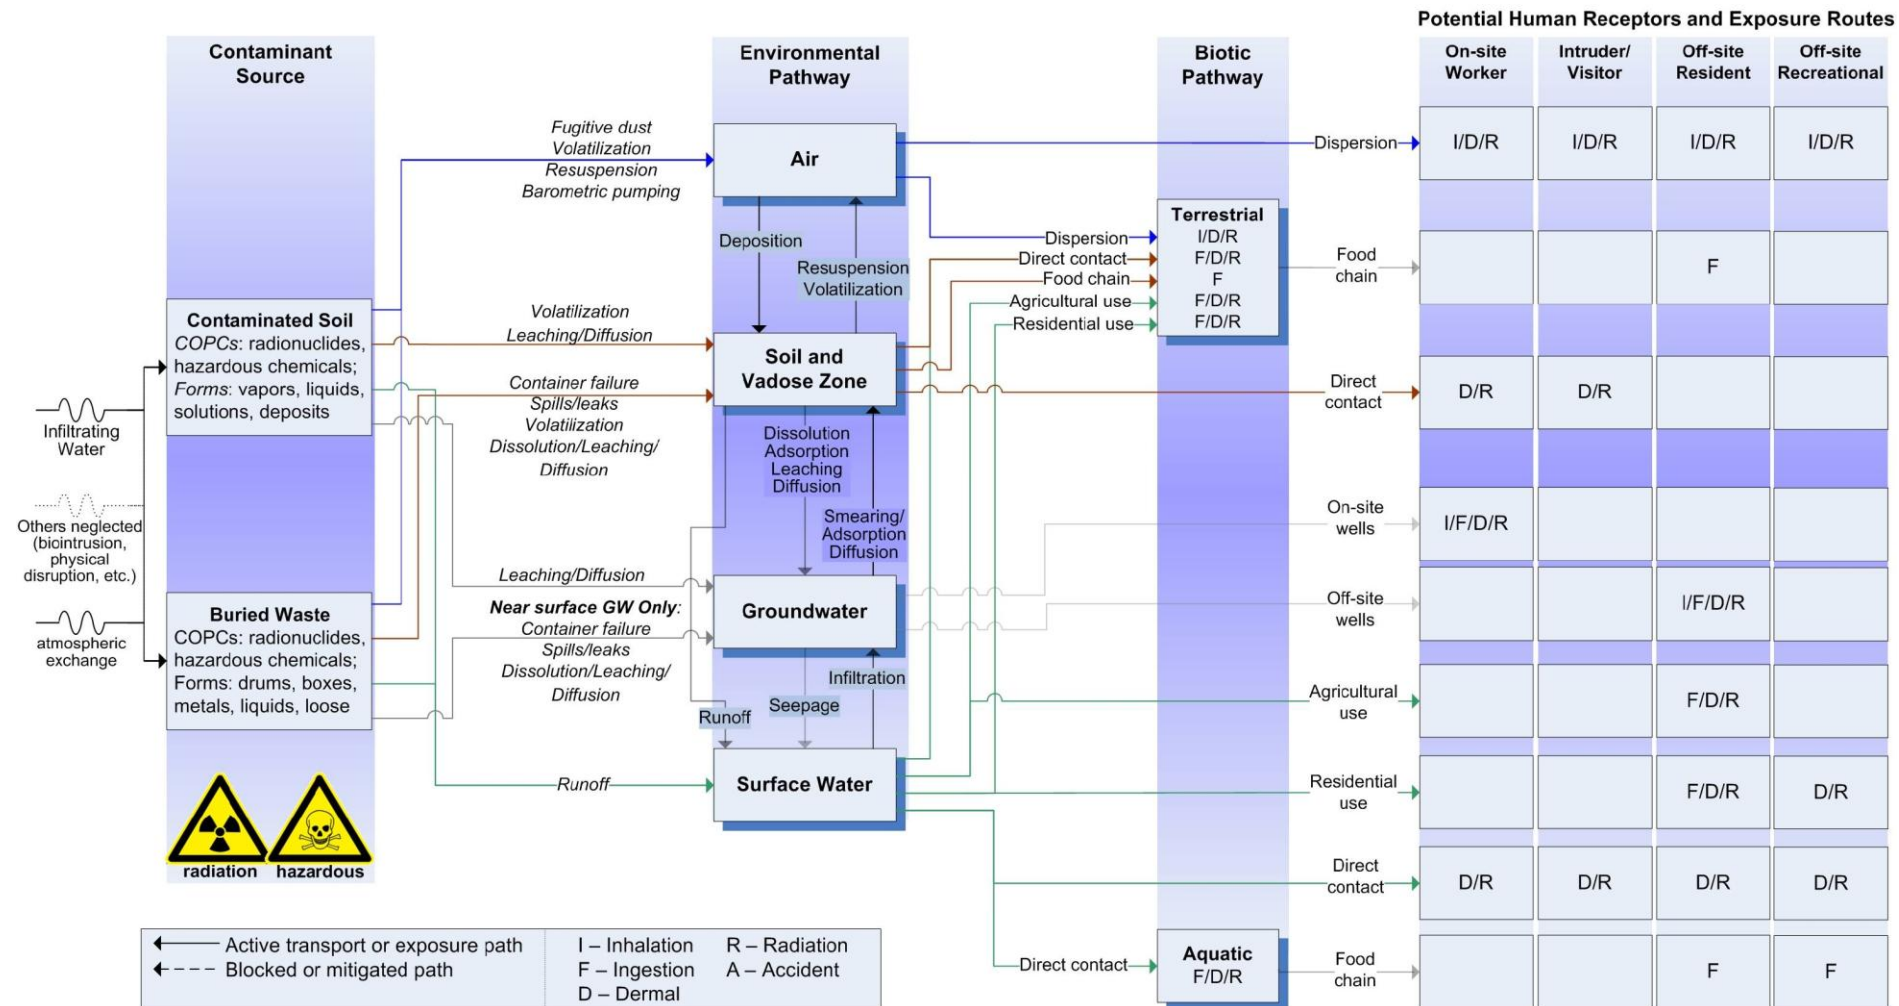

# Conceptual Site Models (CSM)


- Conceptual site models link **sources** of contamination to **potential receptors**, both human and ecological, through **environmental transport pathways** and **exposure routes**.
- Conceptual site models are powerful tools for site characterization, risk assessment and the evaluation of different remediation technologies and strategies
- Conceptual site models are depicted in different ways, using flow charts and environmental cross sections.


**Elvin Jones**

world class jazz drummer  
(John Coltrane and others)

If you  
can't find  
the 1 .....  
forget it!

(or if the  
conceptual  
model is wrong  
...)

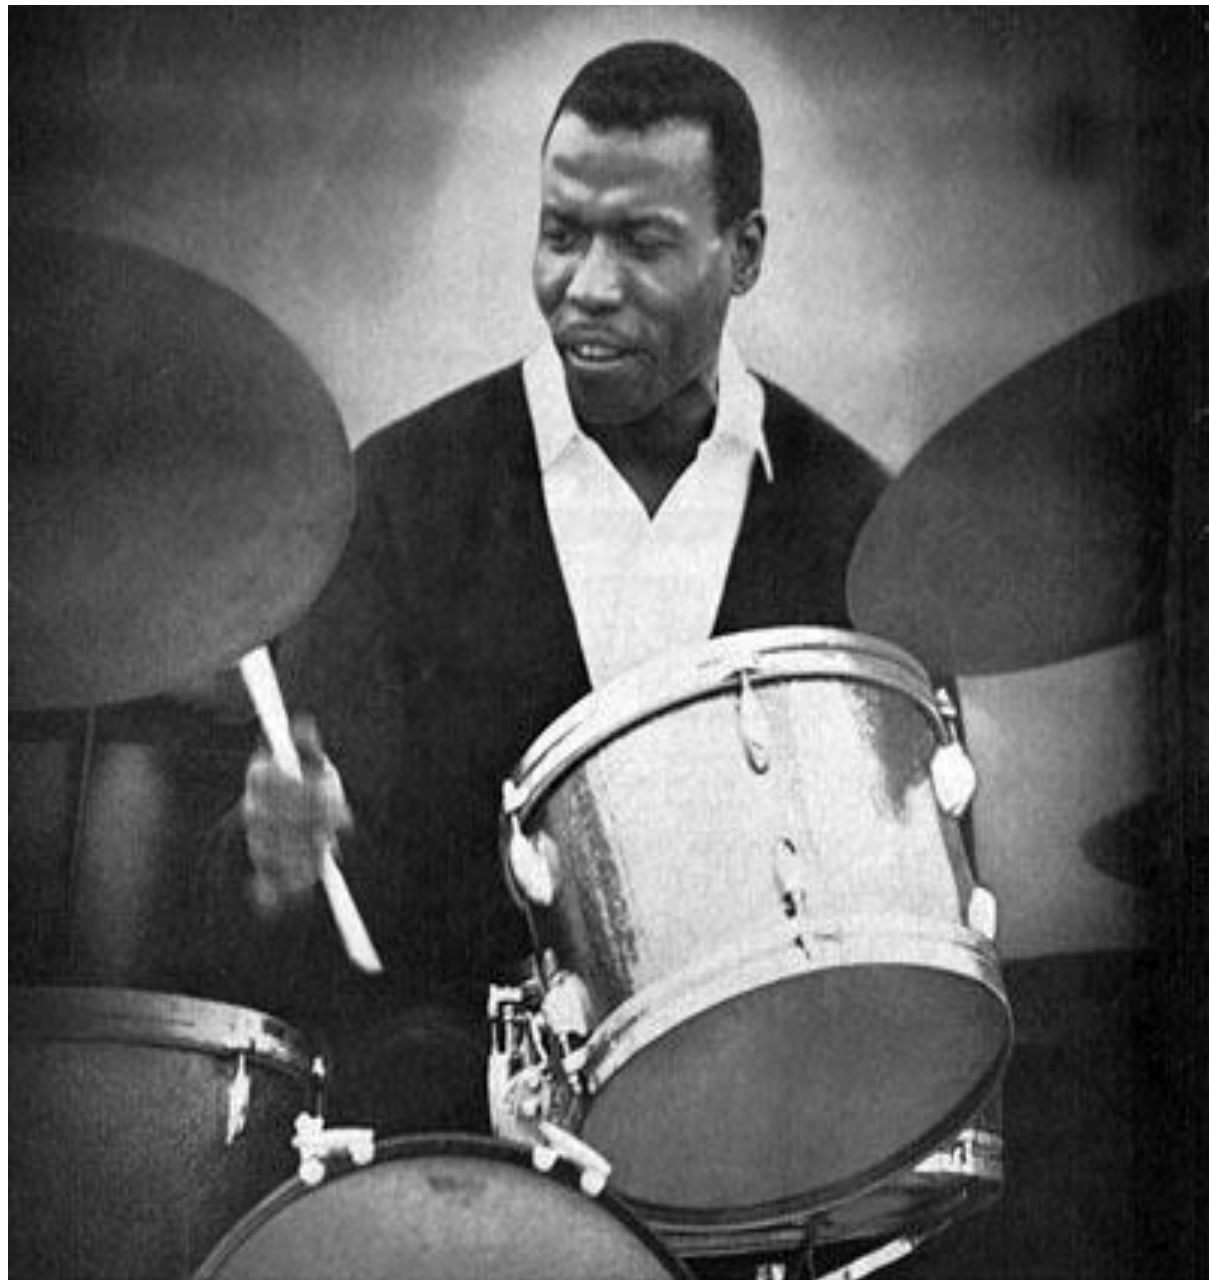

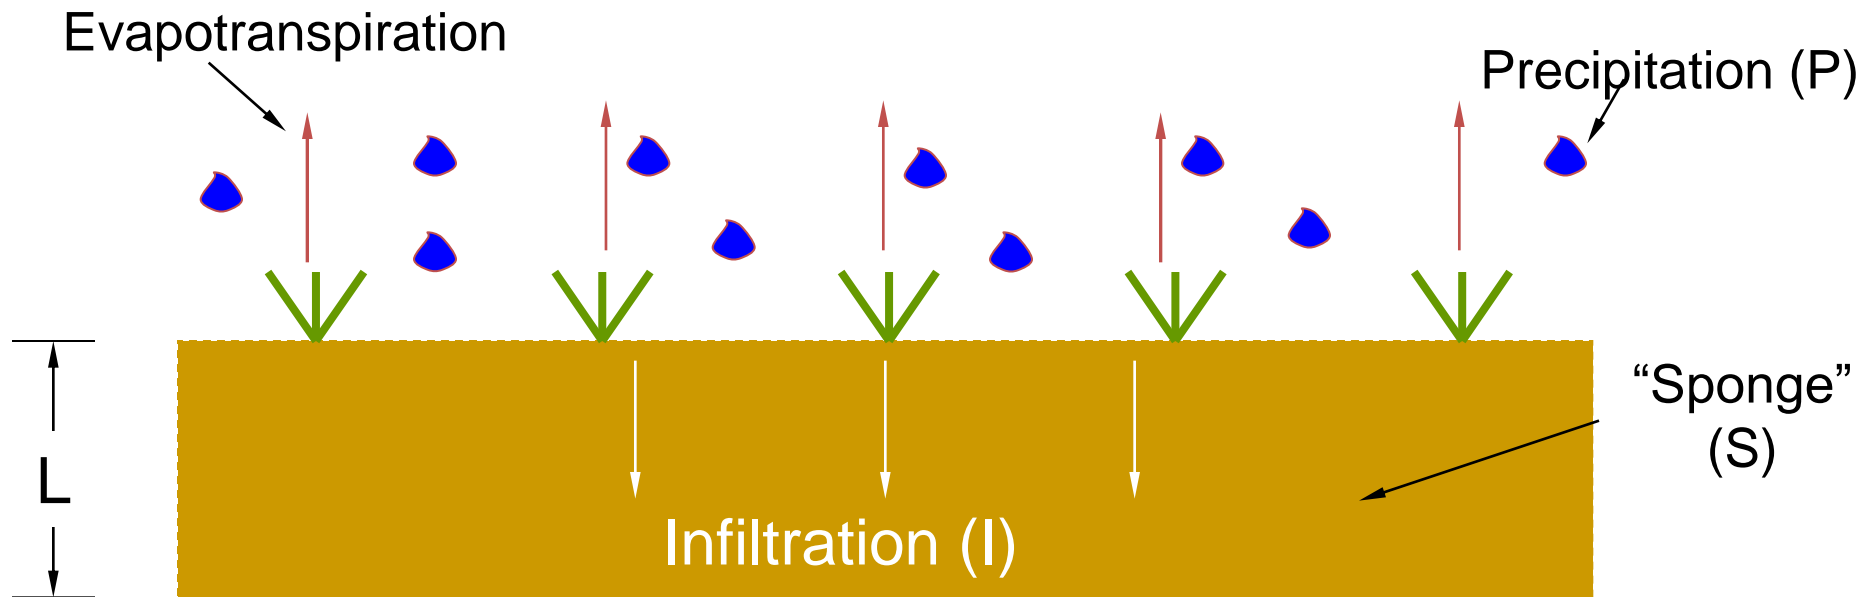

### Factors Affecting Storage & Percolation

Water retention characteristics of soils  
(loam vs. sand)

Meteorological conditions

- amount of precipitation
- distribution of precipitation
- form of precipitation

Type of vegetation

Layering of soils



# Event Tree: Plant Community Changes Excessive Precipitation

Plant Community at  
Equilibrium

Flood Stage  
Capacity  
Reached

Sponge  
Storage  
Capacity Reach

Large Change

Root  
Mortality

Intermed.

Partial  
Groundcover  
Death

Low

Root System  
Adjustments

YES

Increased  
Groundwater  
Uptake

NO

Potential Plant  
Mortality

No  
Measurable  
Effect -  
Equilibrium

Decreased  
Productivity/  
New  
Community

Increased  
Productivity  
/New  
Community




Small Change

Mature Community

High



# Event Tree: Plant Community Changes due to Drought

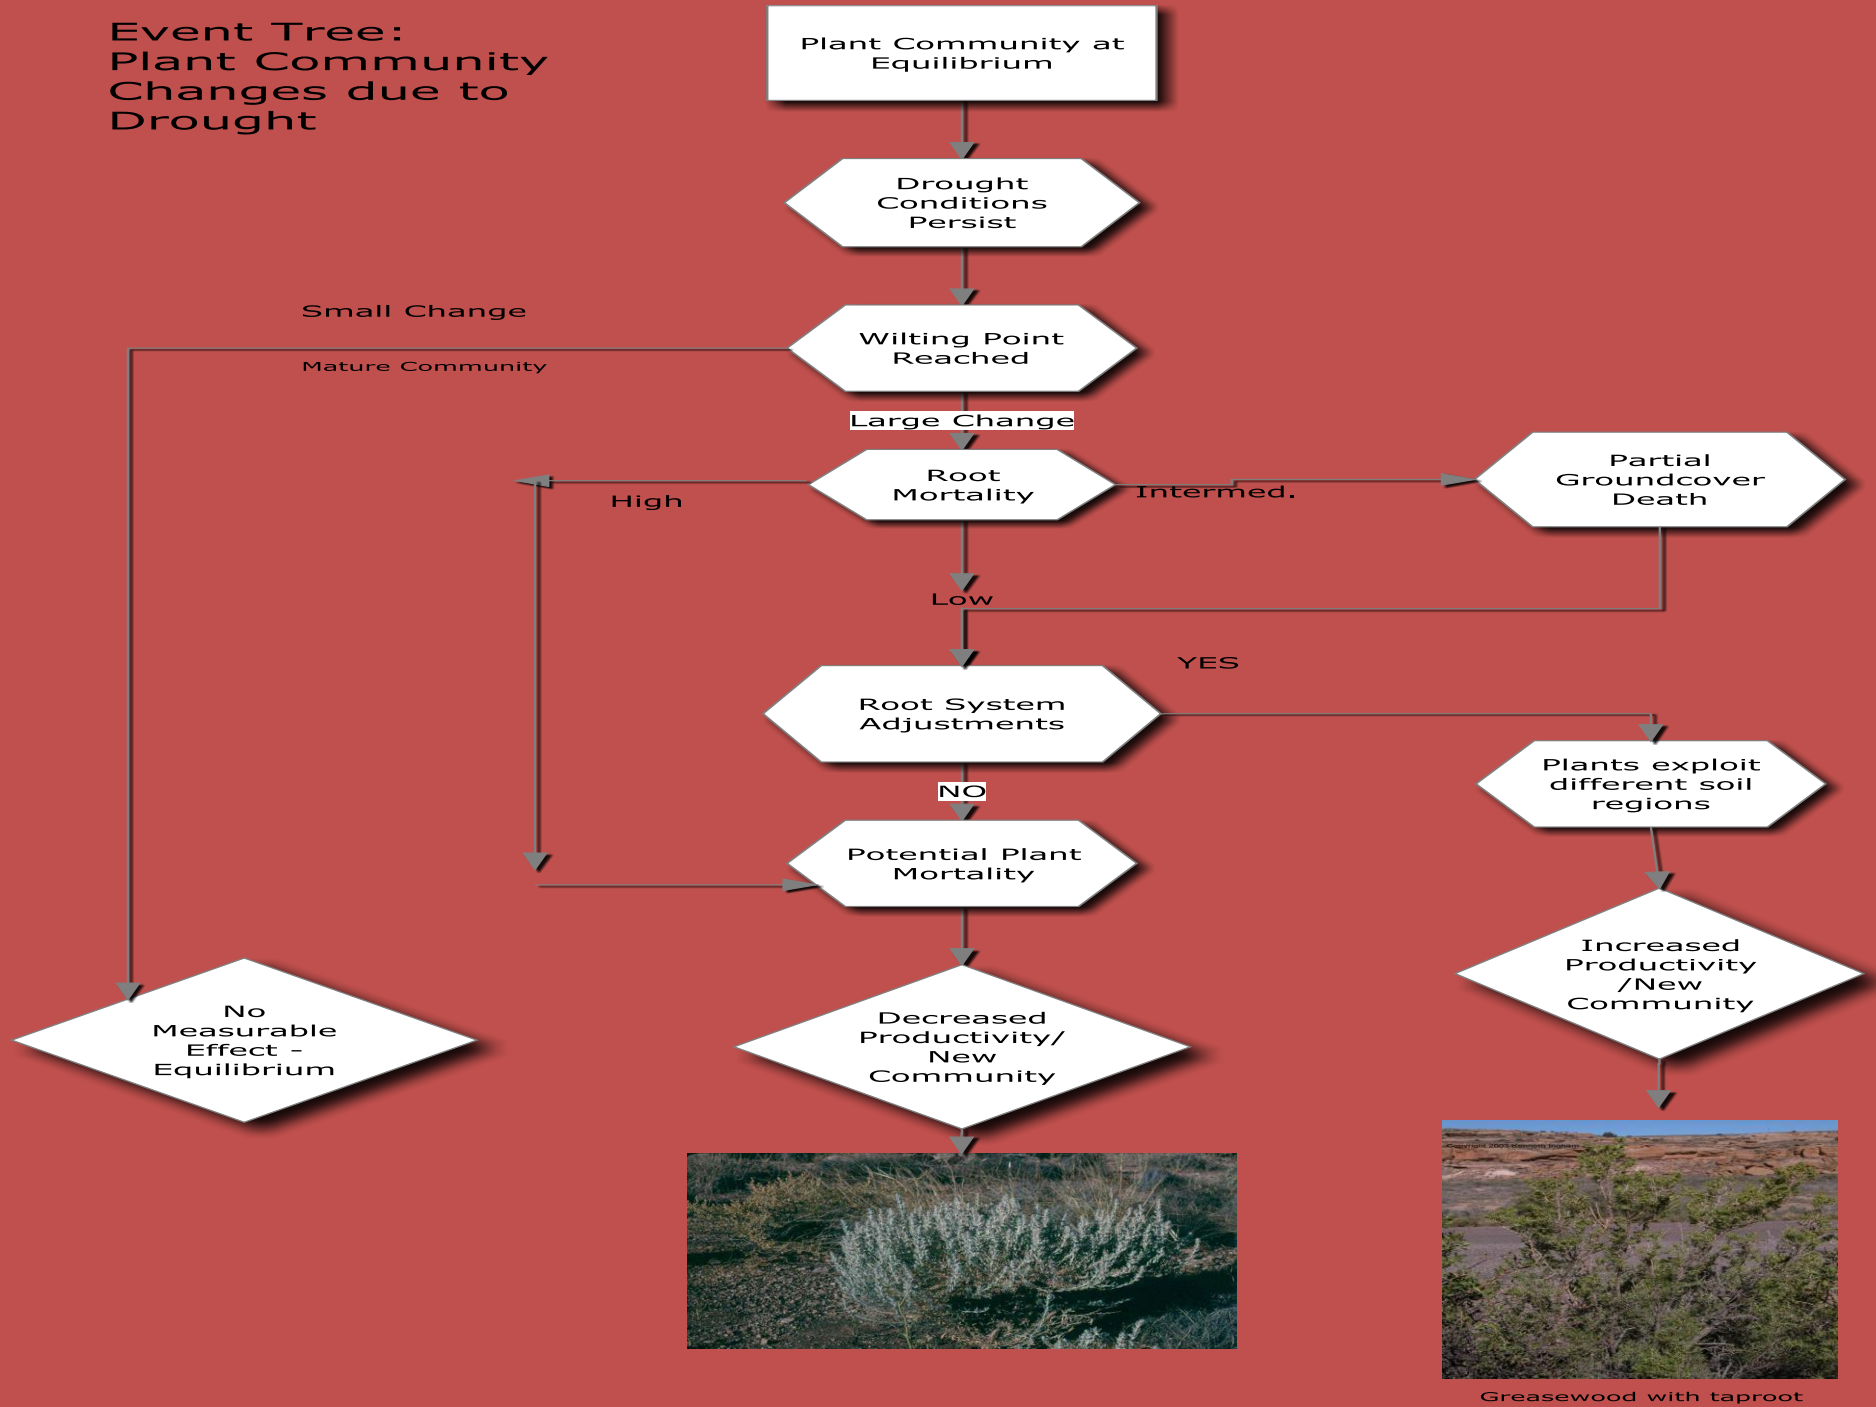

# Event Tree: Plant Community Changes due to Succession

Plant Community  
Established  
(1st yr)

Disturbance



Seral Stage  
Turnover



Large Change

Root  
Mortality

High

Intermed.

Partial  
Groundcover  
Death

Low

Root System  
Adjustments

YES

New Seral  
Stage Develops

NO

Potential Plant  
Mortality

Death of  
Vegetation/L  
ess  
Groundcover

Increased  
Productivity  
/New Seral  
Stage

Mature Community

Mature  
Community  
Equilibrium



Greasewood with taproot

# Preferred Pathways – Fast Flow Paths

- Features of a subsurface environment that enable faster transport and reduced travel times than would otherwise be anticipated
  - E.g., fractures in and zones of higher hydraulic conductivity in consolidated soils and porous media
- Preferred pathways are a typical feature in heterogeneous environments.

**Photo Showing the Fractured  
Rock Subsurface at the Idaho  
National Laboratory**


Transport through the subsurface invariably occurs through preferred pathways resulting in much faster travel times than would be expected in a uniform, homogeneous medium






# Transport and Fate Processes for Radionuclides Released from Waste Packages at the Proposed Yucca Mountain Repository and Migrating Through the Underlying Vadose Zone

- Advection
- Dispersion
- Matrix diffusion
- Sorption
- Colloidal transport
  - Pore size exclusion
  - Filtration/attachment
- Decay

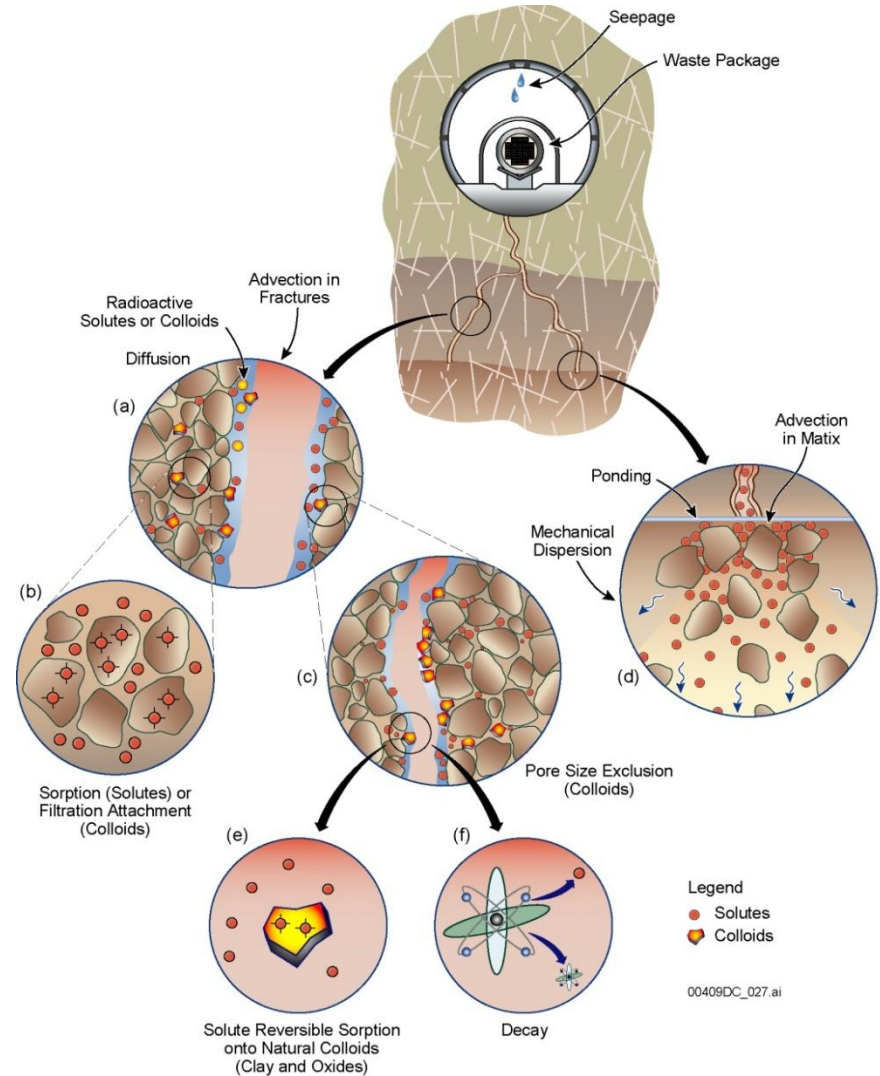

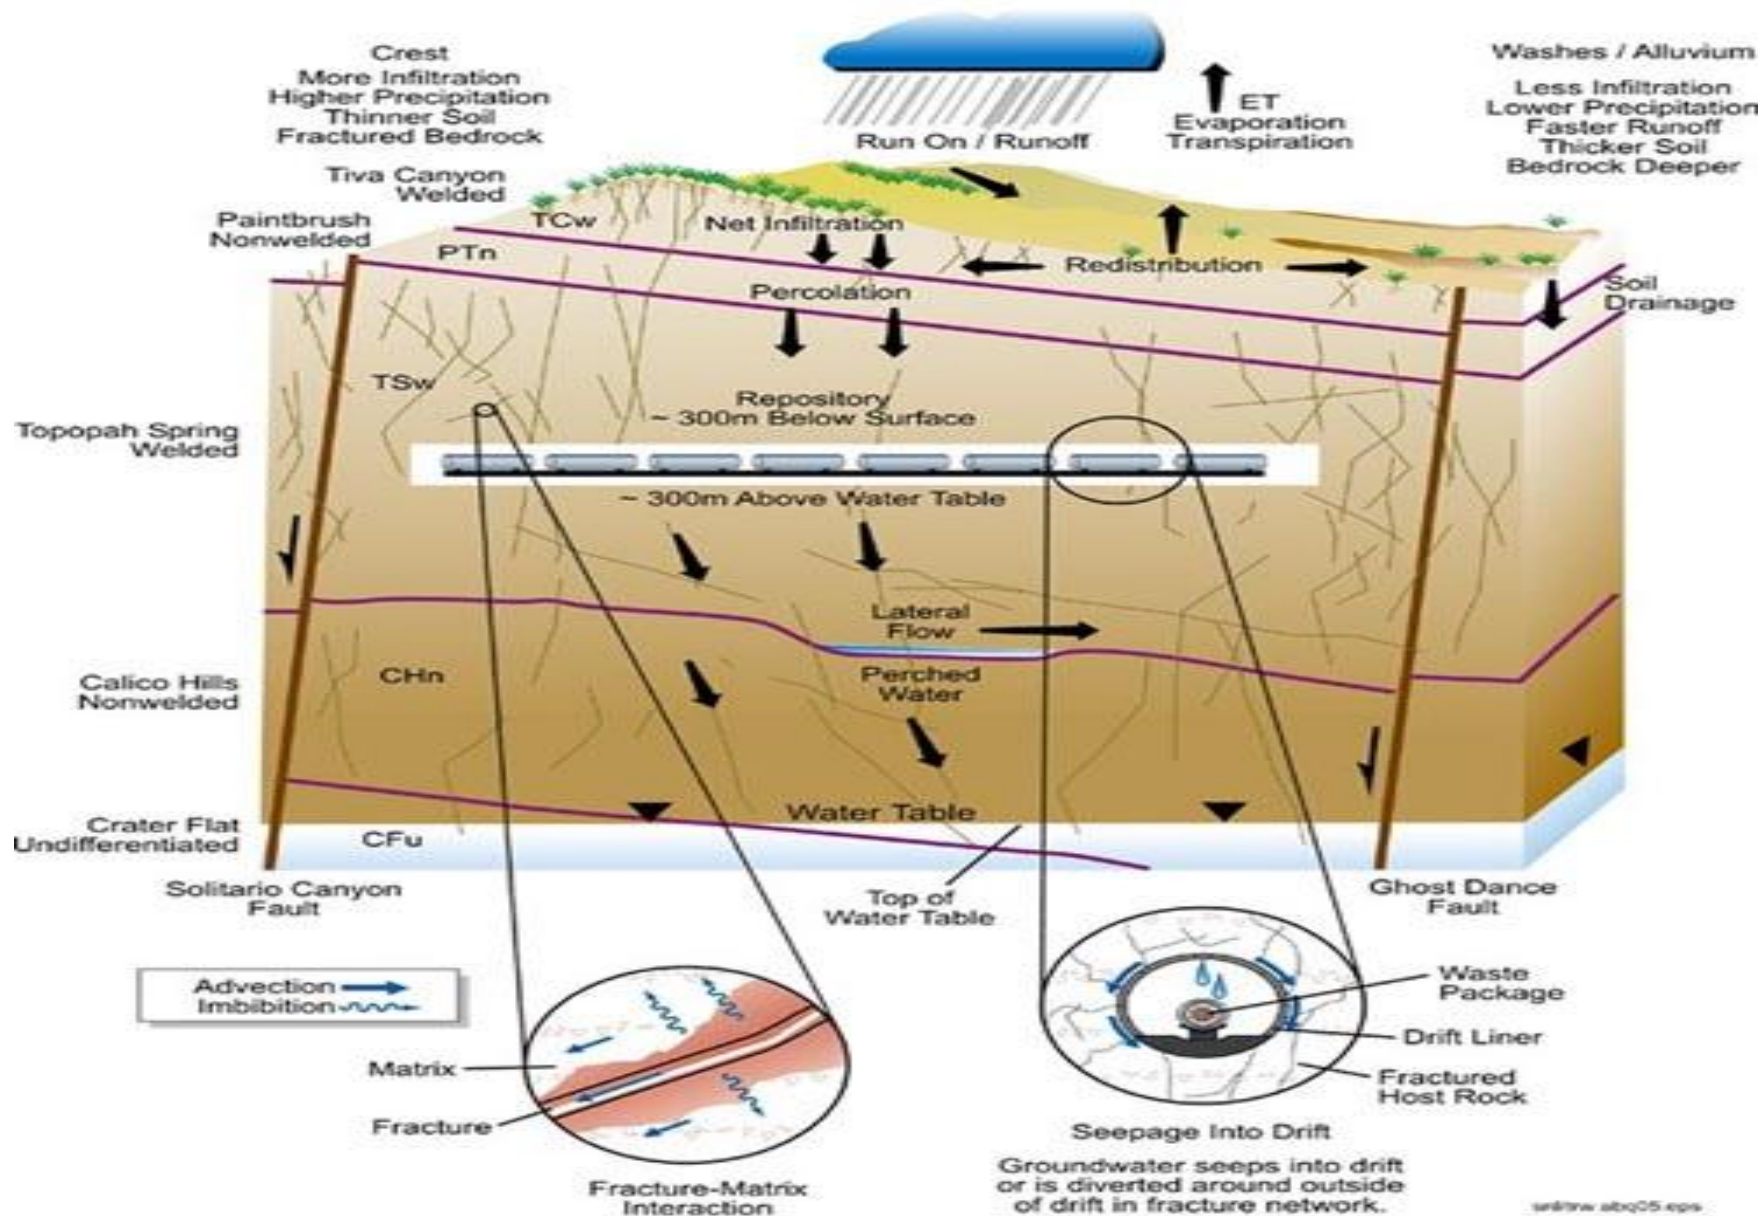

snltnw abq05.eps  
FV10223-1  
81-05.ALSTEDESC-R01



# How do we get the $K_d$ values?


In order of increasing confidence:

- from the literature
- from empirical correlations
- from laboratory tests
- from field studies

# What About the Importance of the Presence of Other Chemicals?

Need to include other chemicals in the analysis especially if they have to potential to affect the mobility of the radionuclides of interest

- Complexing agents (e.g., EDTA)
- Solvents (e.g., TCE)
- Oxidizing and reducing agents

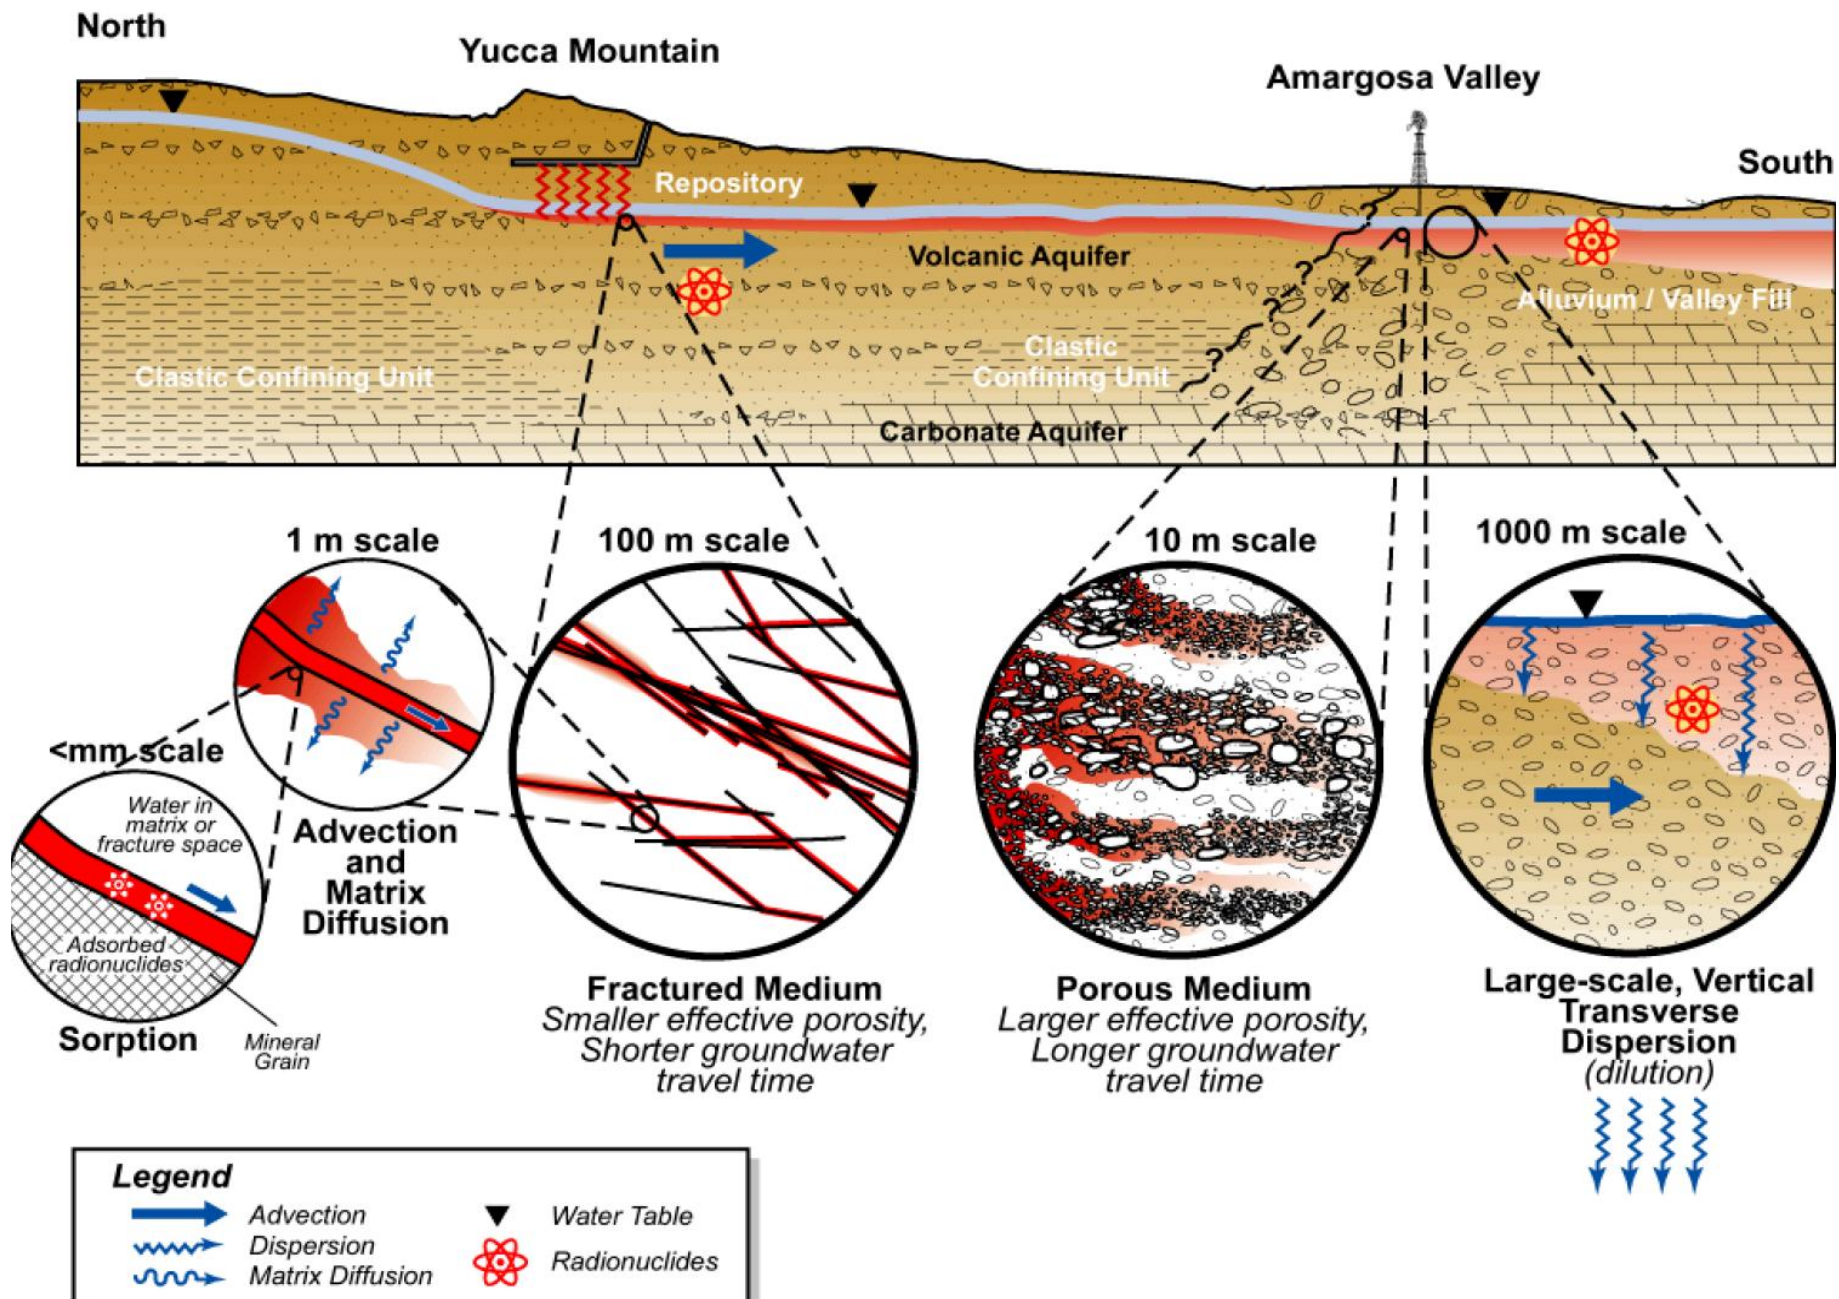

# Fundamental Definitions

## Uncertainty

“Lack of knowledge about specific variables, parameters, models, or other factors. Examples include limited data regarding the concentration of a contaminant in an environmental medium and lack of information on local fish consumption practices. Uncertainty may be reduced through further study.”

USEPA, 2001

# Fundamental Definitions

## Variability

“True heterogeneity or diversity that characterizes an exposure variable or response in a population. Further study (e.g., increasing sample size,  $n$ ) will not reduce variability, but it can provide greater confidence (e.g., lower uncertainty) in quantitative characterizations of variability.”

USEPA, 2001

# Areas of Uncertainty

- Scenario uncertainty
- Conceptual model uncertainty
- Parameter uncertainty
- Modeler uncertainty (Linkov and Burmistrov)

# Approaches to Assessing Uncertainty


- Bounding analysis with perhaps a range of upper limit deterministic estimates (downside – often very conservative and unrealistic assumptions are made)
- More realistic deterministic estimates but with accompanying multiparameter sensitivity analysis
- Probabilistic analysis to yield a distribution of results
- “Hybrid” approach



# Evolution of PAs

Past (Generation I)	Present (Generation II)
Deterministic	Hybrid (combination of probabilistic and deterministic methods)
Reliance on conservative-bias, less consideration of engineered features	Balance between realism and conservative-bias (probabilistic interpretation of compliance in some cases)
Conduct PA, send to regulator for review	Increased involvement with regulators and reviewers during development of PA (scoping)
Deterministic sensitivity analysis (One-Offs)	More comprehensive sensitivity and uncertainty analysis using deterministic and probabilistic methods
Minimal interaction with closure assessment modeling	Increasing coordination with closure assessment modeling efforts

# Realism and Conservative-Bias in PAs

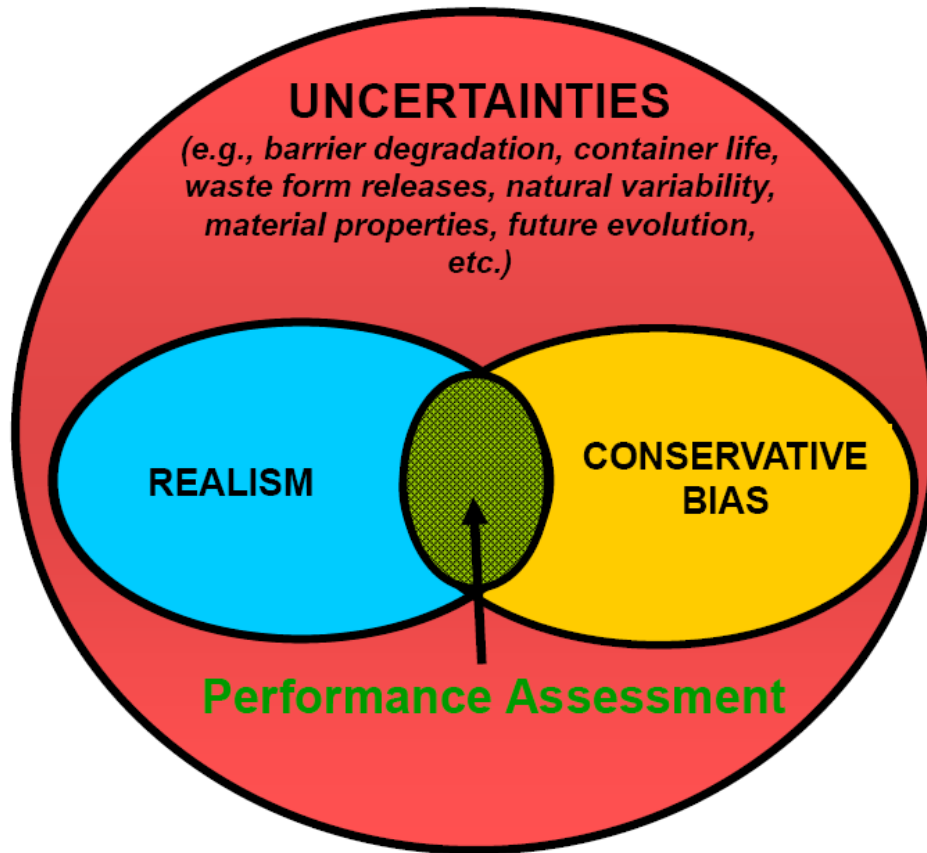

- Conservative Bias
  - Proven to be efficient and appropriate in many cases
  - Provides defense-in-depth and safety margin, may be overly restrictive
  - Must defend that bias is indeed conservative
- Realism
  - Provides more detailed understanding and credit for specific features
  - Data and models needed, can be used as support for simplified models
  - Need to focus detailed efforts where most beneficial and defensible

# Thank You!

A 3D graphic of the word "Questions?" in a purple and blue color scheme. The letters are thick and have a metallic, reflective texture. The text is set against a black rectangular background.

# Backup Slides

# 1-D Advection Dispersion Reaction Equation

$$D \frac{\partial^2 C}{\partial x^2} - v \frac{\partial C}{\partial x} - \lambda C = \frac{\partial C}{\partial t}$$

Where:

- $C$  = solute concentration [ $\text{M L}^{-3}$ ];
- $t$  = time [ $\text{T}$ ];
- $x$  = distance [ $\text{L}$ ];
- $v$  = average groundwater velocity [ $\text{L T}^{-1}$ ];
- $D$  = dispersion coefficient [ $\text{L}^2 \text{T}^{-1}$ ];
- $\lambda$  = first-order decay coefficient [ $\text{T}^{-1}$ ];

# Fundamental Processes

## Advection

- Transport by which a material moves with a flowing medium (air, surface water, groundwater) at the average velocity of the medium

# Dissolved Constituent Transport in The Saturated Zone

## Darcy's Law

$$v = ik/n$$

where

$v$  = avg. gw velocity (cm/sec)

$i$  = hydraulic gradient (dimensionless)

$k$  = hydraulic conductivity (cm/sec)

$n$  = effective porosity (dimensionless)



# Subsurface Exploration

- Soil borings, lithology
- Ground water monitoring well installation
- Pump tests and aquifer tests
- Tracer tests

(Photos courtesy of  
AquAeTer, Inc.,  
Brentwood, TN)



# Fundamental Processes

## Diffusion


- Transport that results from a concentration gradient—material moves in the direction of decreasing concentration.
- In fractured rock, contaminants are transported from flow in fractures to the rock matrix through matrix diffusion.
  - A similar diffusive process transports contaminants from zones of relatively high mobility to zones of lower mobility in subsurface soils.

# Fundamental Processes

## Dispersion

- Diffusive transport plus that transport that results from velocity gradients within the flowing medium
  - Diffusion can be neglected in regions of high velocity
  - When velocities are low, diffusion becomes a very important transport process

# Gaussian Atmospheric Plume Dispersion Model

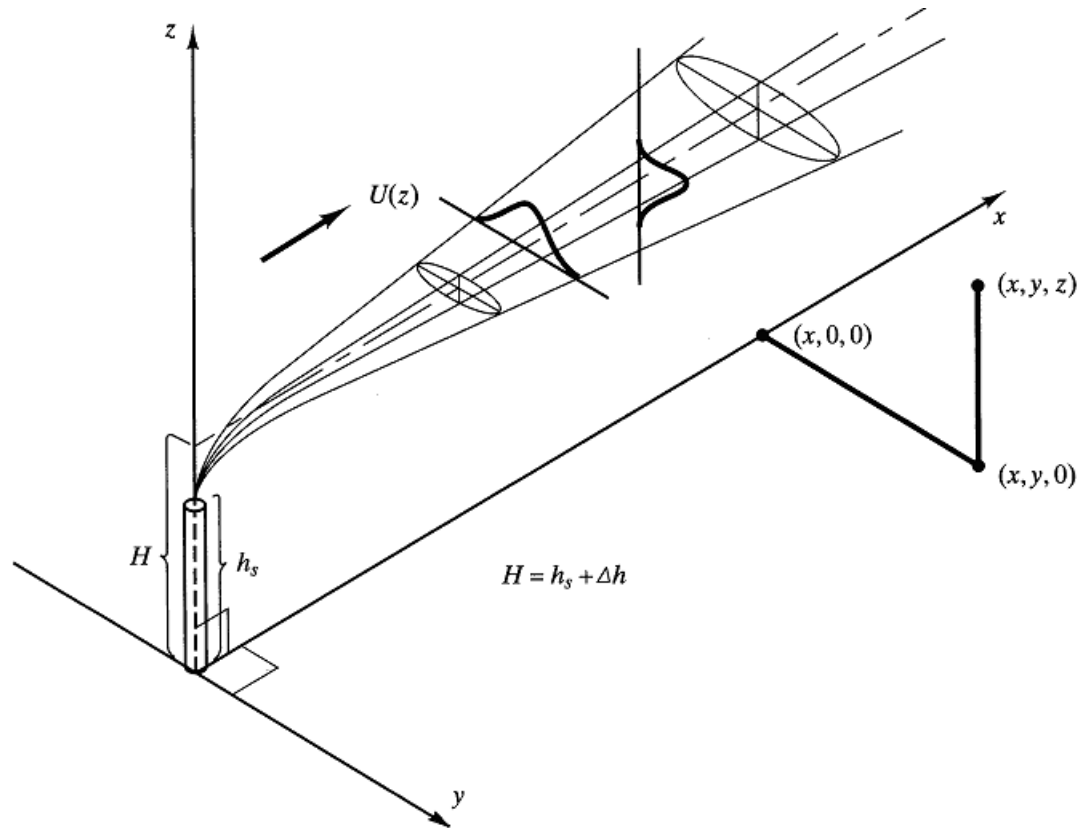

$$C(x, y, z, H) = \frac{Q}{2\pi u \sigma_y \sigma_z} \exp\left(-\frac{y^2}{2\sigma_y^2}\right) \exp\left(-\frac{(z-H)^2}{2\sigma_z^2}\right)$$

## Atmospheric Monitoring and Modeling

Meteorological  
Stations for wind  
speed and  
direction data  
acquisition

(Photos courtesy of  
AquAeTer, Inc.,  
Brentwood, TN)



# Fundamental Processes

## Sorption

- A reactive process by which a dissolved constituent interacts with a solid surface resulting in a retardation effect when the movement is through a solid matrix (subsurface transport).
- In atmospheric and surface water transport, sorption results in a partitioning of the material from the flowing medium to solids suspended in the medium

# Definition of the Retardation Factor, R

$$R = 1 + (\rho/\eta)K_d$$

where  $\rho$  = bulk solids density (g/ml)

$\eta$  = effective porosity

and  $K_d$ , the soil water partition coefficient, is greater than or equal to zero

With this definition,

$R$  = avg. groundwater velocity / avg. velocity of the dissolved chemical

So when  $K_d$  is greater than zero, the average velocity of the dissolved chemical is less than the average groundwater velocity, i.e., its transport is “retarded”.



# Fundamental Processes

## Decay

- The transformation of a constituent into another species either through changes in the nucleus or chemical or biological transformations

# Fundamental Processes

## Colloidal Transport

- The movement of contaminants in the form of very small particles or attached to very small particles.
- Colloids are typically taken to be on the order of a 0.1 to 0.001 microns (micrometers).
- Colloidal transport can result in higher transport velocities and corresponding lower travel times than would be predicted otherwise.